

Operation Instructions

How to start your generator

- STEP 1** Check / fill the engine oil
- STEP 2** Check / fill the fuel
- STEP 3** Place the circuit breaker in OFF position
- STEP 4** Open the fuel valve to the ON position
- STEP 5** Place the choke to the START position
- STEP 6** Turn the switch in the ON position (recoil start). Turn the key to the START position. Once the engine starts, release the key immediately (E-start)
- STEP 7** Pull recoil starter until engine runs (recoil start).
- STEP 8** Place the choke lever in the RUN position
- STEP 9** Connect the electrical devices.
- STEP 10** Turn the circuit breaker to the ON position

Maxwatt petrol generators are tough, rugged and offer the highest levels of performance, reliability and safety, while still being in compliance with Australian WH&S regulations. Our generators are the ideal portable power source to power up all your electrical appliances and tools AND are also useful for home use as a backup power supply.

Maxwatt digital inverter generators offer the best in portable power while being light to carry, fuel efficient and super silent. Besides the electrical output being able to power all sensitive electronic equipment, our generators are also an essential part of recreational caravanning and camping AND also useful for home use as a backup power supply.



**RECOIL
STARTING METHOD**



**ELECTRIC/RECOIL
STARTING METHOD**

2
YEAR
WARRANTY

How to stop your generator

- STEP 1** Disconnect all the electrical appliances one at a time.
- STEP 2** Turn the key to the OFF position
- STEP 3** Turn the fuel valve to the OFF position

What to check for if your generator will not start


- STEP 1** Check the fuel and add if required.
- STEP 2** Check the oil level and add if required. Please note that these machines are fitted with a low oil alert sensor that will prevent the generator from starting if there is insufficient oil.
- STEP 3** Check the fuel valve is in the OPEN position.
- STEP 4** Check the choke lever arm is in the START position
- STEP 5** Check that the spark plug is clean and not black with carbon. Then check for spark.
- STEP 6** Check that the battery is fully charged.

Maxwatt petrol generators are tough, rugged and offer the highest levels of performance, reliability and safety, while still being in compliance with Australian WH&S regulations. Our generators are the ideal portable power source to power up all your electrical appliances and tools AND are also useful for home use as a backup power supply.

Maxwatt digital inverter generators offer the best in portable power while being light to carry, fuel efficient and super silent. Besides the electrical output being able to power all sensitive electronic equipment, our generators are also an essential part of recreational caravanning and camping AND also useful for home use as a backup power supply.




**RECOIL
STARTING METHOD**

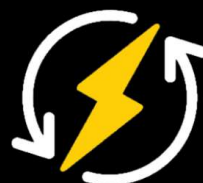

**ELECTRIC/RECOIL
STARTING METHOD**

**2
YEAR
WARRANTY**

What to check for if your generator has no power

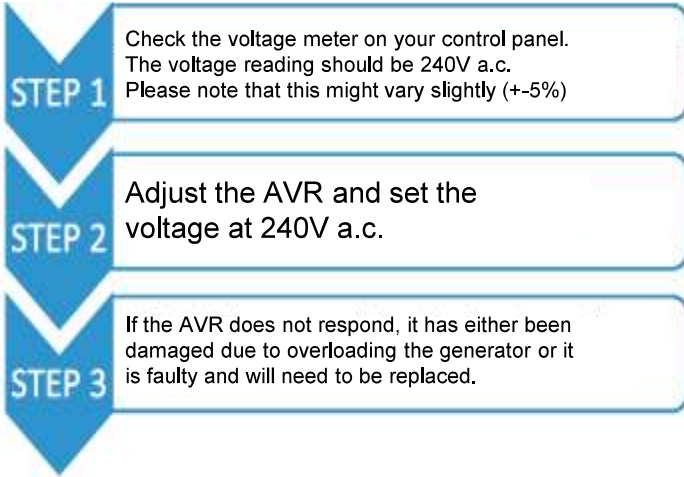

What type of fuel does it use?

All standard grades of unleaded petrol are suitable for use in Maxwatt generators, including regular (91), premium (95), ultra-premium (98).

Do I need to add oil to the fuel?


No, all Maxwatt machines are fuel efficient for models that do not need a petrol-oil mix like 2-stroke engines.

Maxwatt petrol generators are tough, rugged and offer the highest levels of performance, reliability and safety, while still being in compliance with Australian WH&S regulations. Our generators are the ideal portable power source to power up all your electrical appliances and tools AND are also useful for home use as a backup power supply.

Maxwatt digital inverter generators offer the best in portable power while being light to carry, fuel efficient and super silent. Besides the electrical output being able to power all sensitive electronic equipment, our generators are also an essential part of recreational caravanning and camping AND also useful for home use as a backup power supply.



**RECOIL
STARTING METHOD**

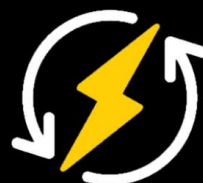

**ELECTRIC/RECOIL
STARTING METHOD**

**2
YEAR
WARRANTY**