

MAXWATT®

POWER WHEN YOU NEED IT

SPARE PARTS CATALOGUE




MX11000i

MAXWATT®

POWER WHEN YOU NEED IT



COMPONENTS

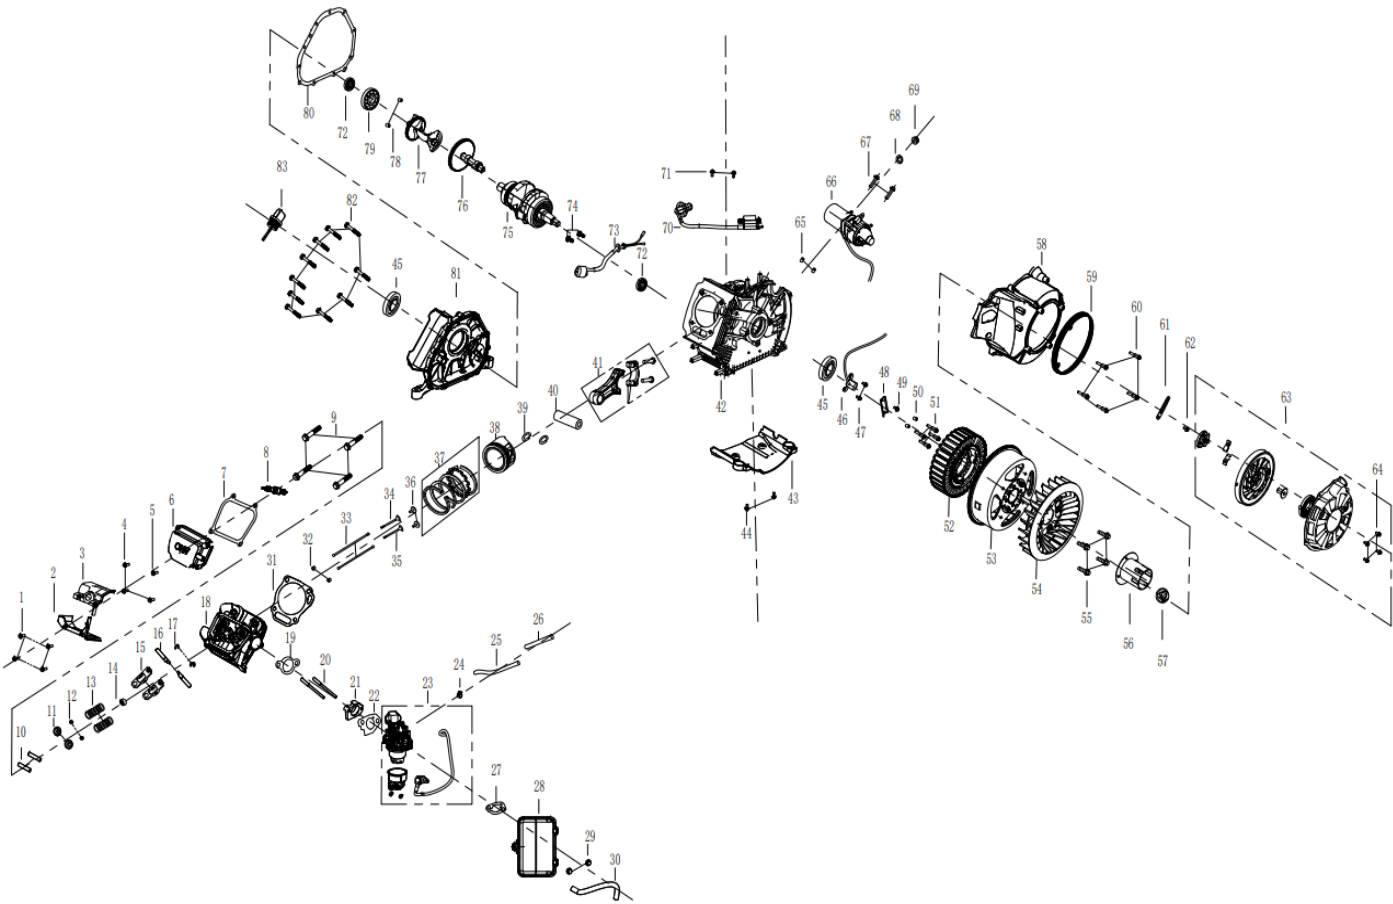

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	
2	Cylinder head under the air guide hood	
3	Cylinder head upper the air guide hood	
4	Bolt	
5	Bolt	
6	Cylinder head cover assembly	
7	Cylinder head cover gasket	SP11000I-019
8	Spark plug parts	SP11000I-020
9	Bolt	
10	Exhaust bolt	
11	Valve spring seat	
12	Air lock clamp	
13	Valve spring	
14	Oil seal	SP11000I-021
15	Valve rocker arm assembly	
16	Rocker arm shaft	
17	Retainer	
18	Cylinder head assy	SP11000I-022
19	Air intake gasket	
20	Air intake stud	
21	Carburetor connection block	
22	Carburetor gasket	SP11000I-023
23	Carburetor assy	
24	Clamp	
25	Oil pipe	SP11000I-024
26	Protective cover	
27	Air filter gasket	
28	Air filter assembly	SP11000I-025
29	Nut	
	AIR FILTER ELEMENT	SP11000I-026
30	Exhaust pipe	SP11000I-027
31	Cylinder head gasket	SP11000I-028
32	Pin	
33	Valve push rod	
34	Exhaust valve	SP11000I-029
35	Air intake valve	
36	Valve elevator	
37	Piston ring assembly	SP11000I-030
38	Piston	
39	Piston pin clamp ring	SP11000I-031
40	Piston pin	
41	Connecting rod assembly	SP11000I-032
42	Crankcase	
43	The air guide cover under the box	
44	Bolt	
45	Oil seal	SP11000I-033
46	Trigger	SP11000I-034
47	Bolt	
48	Wire pressing plate	
49	Bolt	
50	Pin	

51	Screw	
52	Stator	SP11000I-035
53	Rotor	SP11000I-036
54	Fan	SP11000I-037
55	Bolt	
56	Starting cup	SP11000I-038
57	Nut	
58	Starter cover	SP11000I-039
59	Gasket	
60	Bolt	
61	Wire clamp	
62	Bolt	
63	Starting pull	SP11000I-040
64	Bolt	
65	Pin	
66	Starting motor	SP11000I-041
	STARTER MOTOR RELAY	SP11000I-042
67	Bolt	
68	Aluminium gasket	
69	Bolt	
70	Bolt	
71	Ignition controller	SP11000I-043
72	Bearing	
73	Oil sensor	SP11000I-044
74	Bolt	
75	Crankshaft assembly	
76	Camshaft assembly	
77	Balance shaft	
78	Pin	
79	Bearing	
80	Crankcase cover gasket	
81	Crankcase cover	
82	Bolt	
83	Oil dipstick	SP11000I-045

COMPONENTS

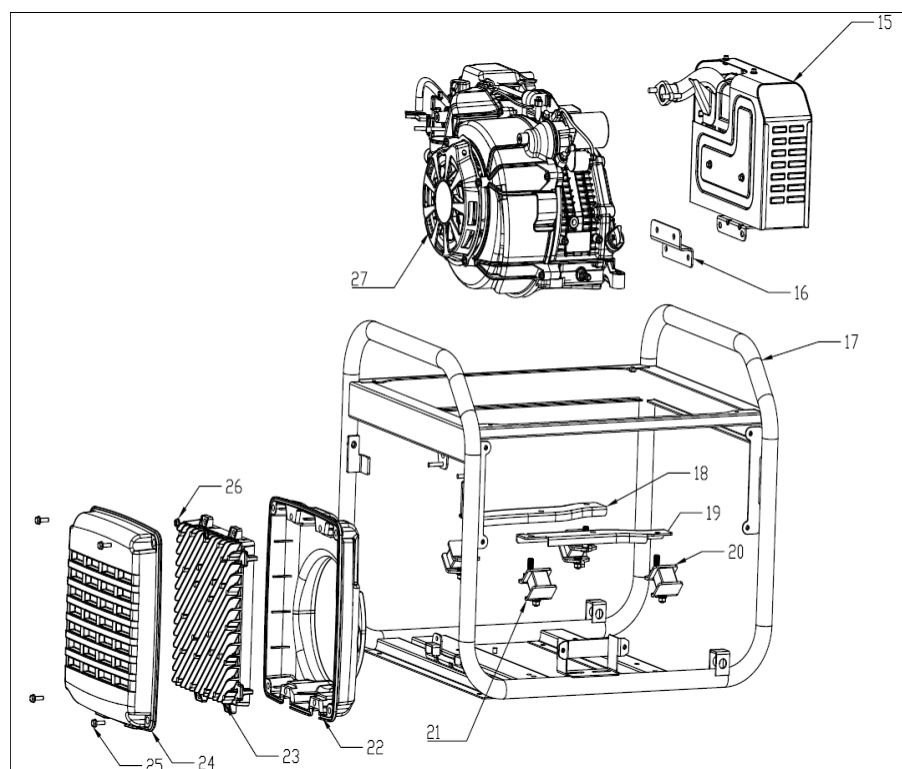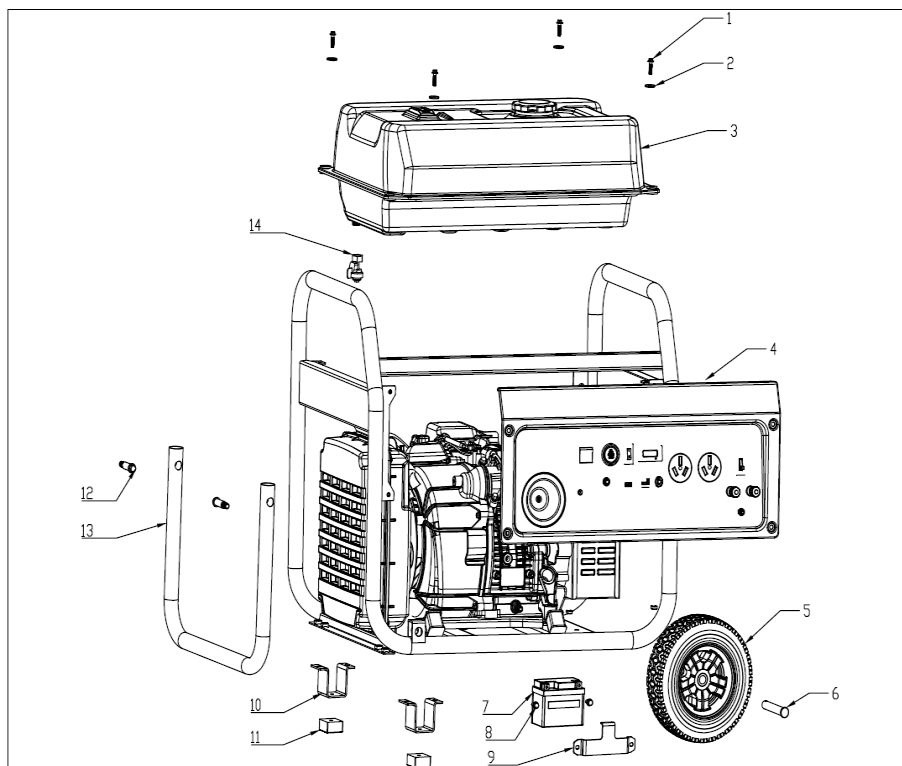



NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	
2	Tank Gasket	
3	Fuel Tank Assembly	SP11000I-002
	Fuel Cap	SP11000I-003
4	Control Panel Assembly	SP11000I-004
5	Wheel	
6	Axle	SP11000I-005
7	Lithium Battery	SP11000I-006
8	Bolt	
9	Battery Pressure Plate	SP11000I-007
10	Support Component	SP11000I-008
11	Vibration Absorbing Rubber Pad	
12	Handle Pin	
13	Handle	SP11000I-009
14	Tank Switch	
15	Muffler Component	
16	Muffler Mounting Fixing Plate	SP11000I-010
17	Rack Assembly	
18	Engine Mounting Plate Left	SP11000I-011
19	Engine Mounting Plate Right	SP11000I-012
20	Damping Mount	SP11000I-013
21	Damping Support	SP11000I-014
22	Inverter Inner Cover	SP11000I-015
23	Inverter Component	SP11000I-016
24	Inverter Outer Cover	SP11000I-017
25	Bolt	
26	Nut	
27	Engine Component	SP11000I-018

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au