




SPARE PARTS CATALOGUE



MX9000AS


ENGINE EXPLODED VIEW

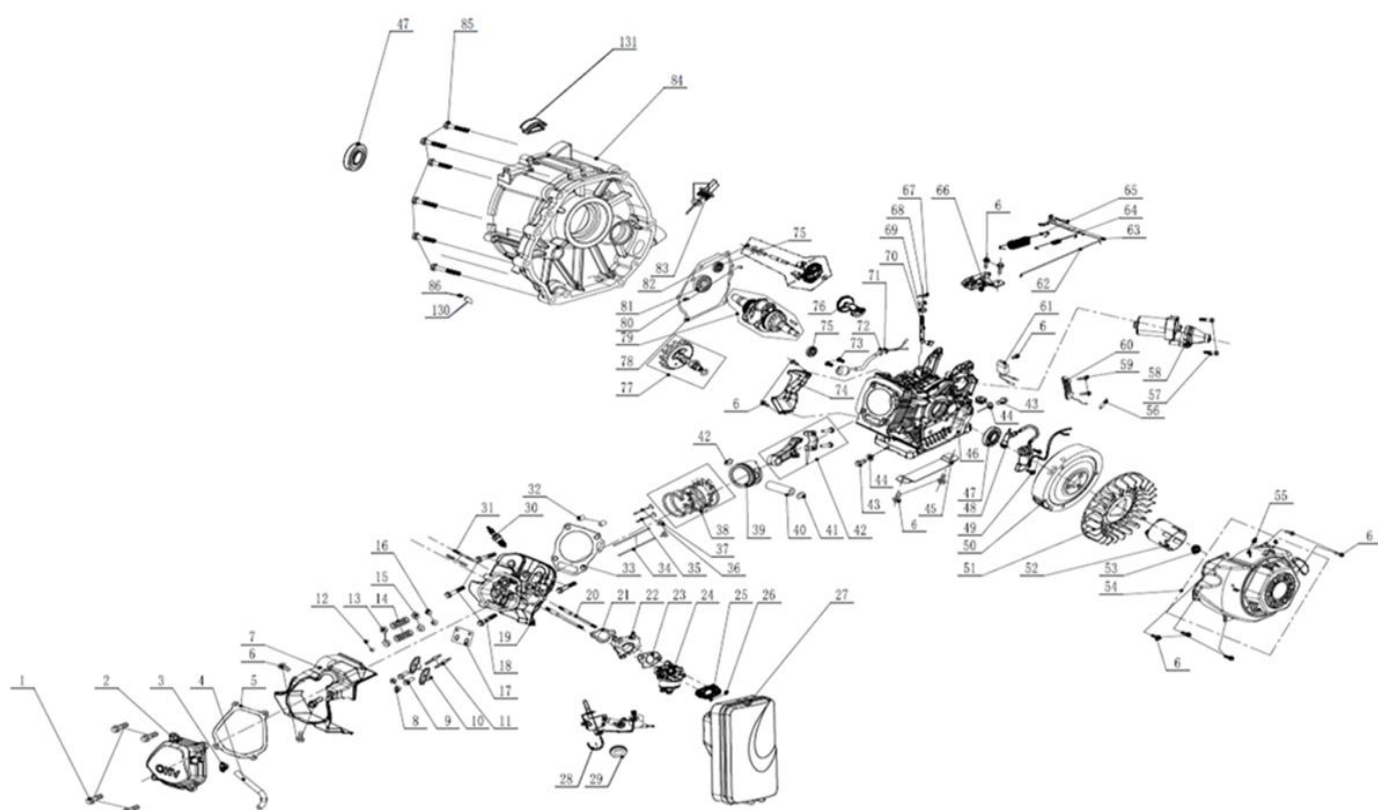

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Hexagon Flange Bolt / M6	
2	Cylinder Head Assembly	SP10240
3	Clamp / $\Phi 14 * \Phi 15.5 * 10$	
4	Exhaust Pipe / $\Phi 10 * \Phi 15.5$	SP10241
5	Cylinder Head Gasket	SP10242
6	Hexagon Flange Bolt	
7	Cylinder Head Air Hood	
8	Rocker Shaft Adjusting Nut	SP10243
9	Rocker Shaft / M6 / Ball Nut	
10	Valve Rocker Arm	
11	Rocker Shaft Bolt / M6 * M8	
12	Exhaust Valve Rotor / $\Phi 9.5 * 6$	
13	Exhaust Valve Spring Seat	
14	Valve Spring / $\Phi 3 * \Phi 26 * 39 / 6.75 \text{ Turns} / 188\text{F}$	
15	Exhaust Valve Spring Seat	
16	Oil Seal	
17	Pusher Guide	
18	Hexagon Flange Bolt / M10	
19	Cylinder Head Assembly	SP10244
20	Intake Stud Bolt	
21	Air Inlet Seal	SP10245
22	Carburetor Connection Block	SP10246
23	Carburetor Gasket	
24	Carburetor Assembly	SP10247
25	Air Filter Gasket	SP10248
26	Hexagon Flange Nut	
27	Air Filter Assembly	SP10249
28	Choke Door Assembly	SP10250
29	Rubber Protective Sleeve	
30	Spark Plug Parts	
31	Exhaust Stud Bolt	
32	Positioning Pin	
33	Cylinder Head Gasket	SP10251
34	Valve Push Rod	SP10252
35	Intake Valve	
36	Exhaust Valve	
37	Valve Tappet	
38	Piston Ring Assembly	SP10253
39	Piston	
40	Piston Pin	
41	Piston Pin Snap Ring	
42	Connecting Rod Assembly	SP10254
43	Hexagon Flange Bolt	
44	Aluminum Gasket	
45	Supporting Parts	
46	Crankcase	
47	Oil Seal	
48	Ignition Coil Assembly	SP10255
49	Hexagon Flange Bolt	
50	Flywheel Parts	SP10256


51	Fan	
52	Starter Cup	
53	Hexagon Flange Nut	
54	Recoil Starter Assembly	SP10257
55	Line Card	
56	Crimp Board	
57	Lower Windshield	
58	Dustproof Rubber / Crankcase Cover	
59	Hexagon Flange Bolt	
60	Charging Coil Parts	SP10258
61	Oil Alarm / Three Wires / White Zinc	SP10259
62	Speed Control Lever	
63	Speed Control Arm Parts	
64	Fine Adjustment Spring	
65	Reset Spring	
66	Speed Controller Assembly	
67	Locating Pin Lock Clip	
68	Swing Rod Gasket	
69	Oil Seal	
70	Adjustable Speed Swing Lever	
71	Hexagon Flange Nu	
72	Oil Sensor	
73	Hexagon Flange Bolts	
74	Lower Air Guide	
75	Deep Groove Ball Bearing	
76	Balance Shaft	SP10260
77	Camshaft Assembly	SP10261
78	Crankcase Cover Gasket	SP10262
79	Crankshaft Assembly	SP10263
80	Positioning Pin	
81	Deep Groove Ball Bearing	
82	Speed Control Gear Assembly / 188F / 7.2G	
83	Oil Dipstick Assembly	
84	Crankcase Cover	
85	Hexagon Flange Bolts	

COMPLETE MACHINE

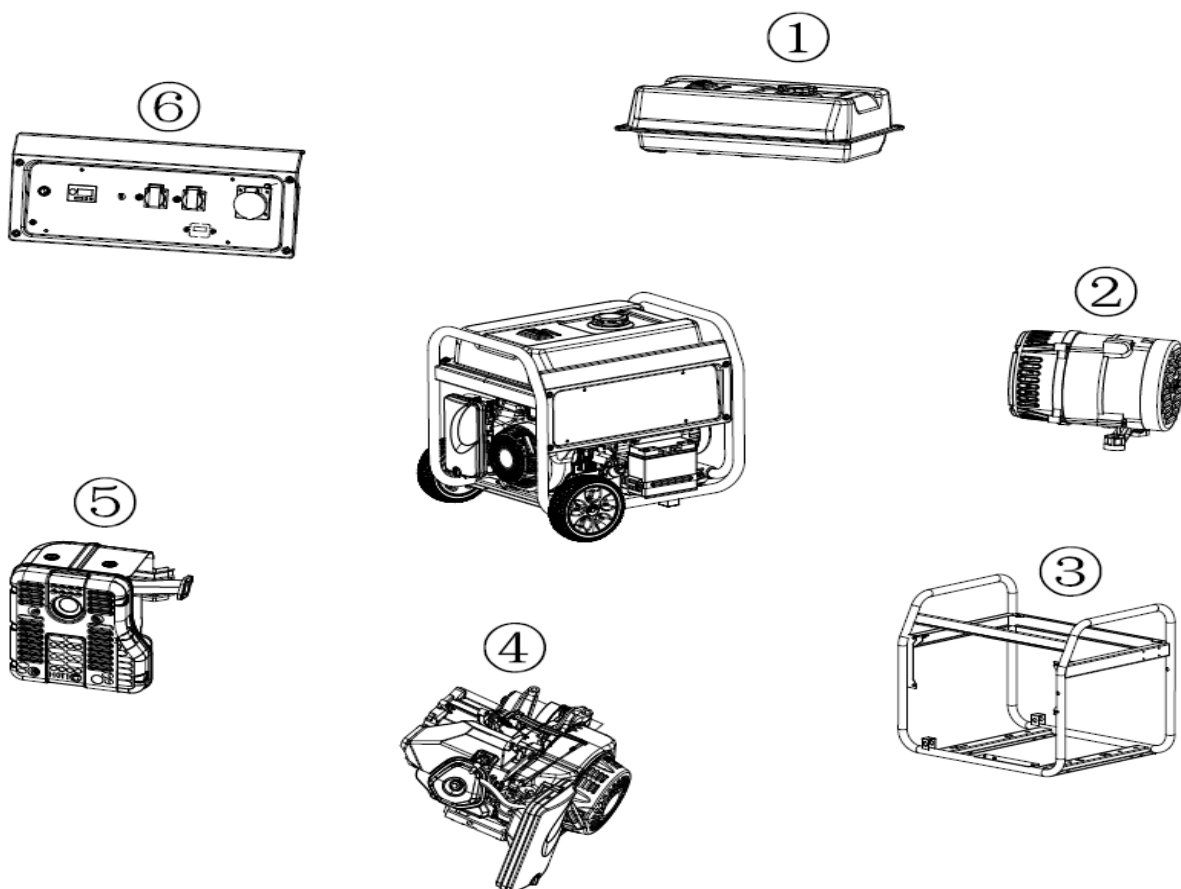


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Fuel tank assembly	SP90005
2	Alternator assembly	
3	Frame assembly	
4	Engine assembly	SP10234
5	Muffler assembly	SP10235
6	Control panel assembly	SP90002

FUEL TANK

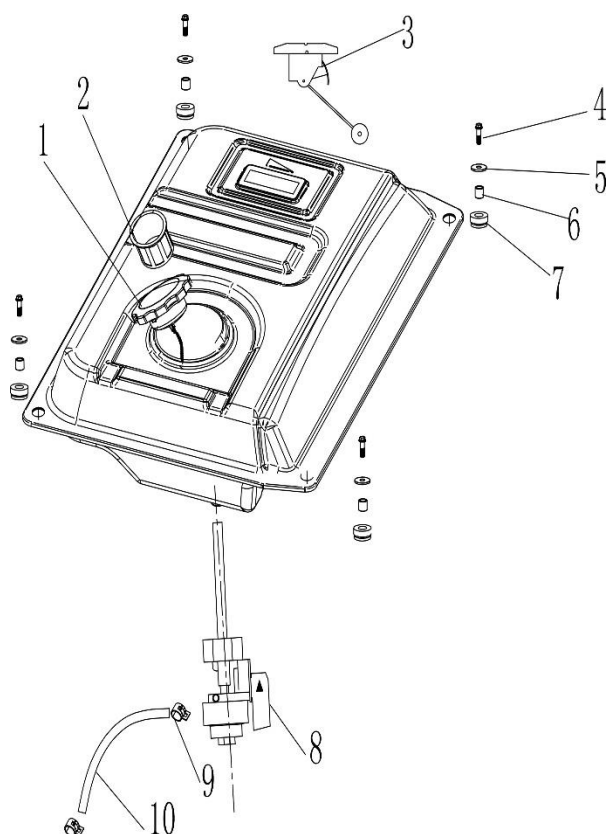


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Fuel tank cover	SP90005
2	Fuel filter	
3	Oil leveler	
4	Flange bolt	
5	Fuel tank washer	
6	Bushing	
7	Fuel tank rubber mat	
8	Fuel valve	
9	Clamp	
10	Fuel pipe	

ALTERNATOR

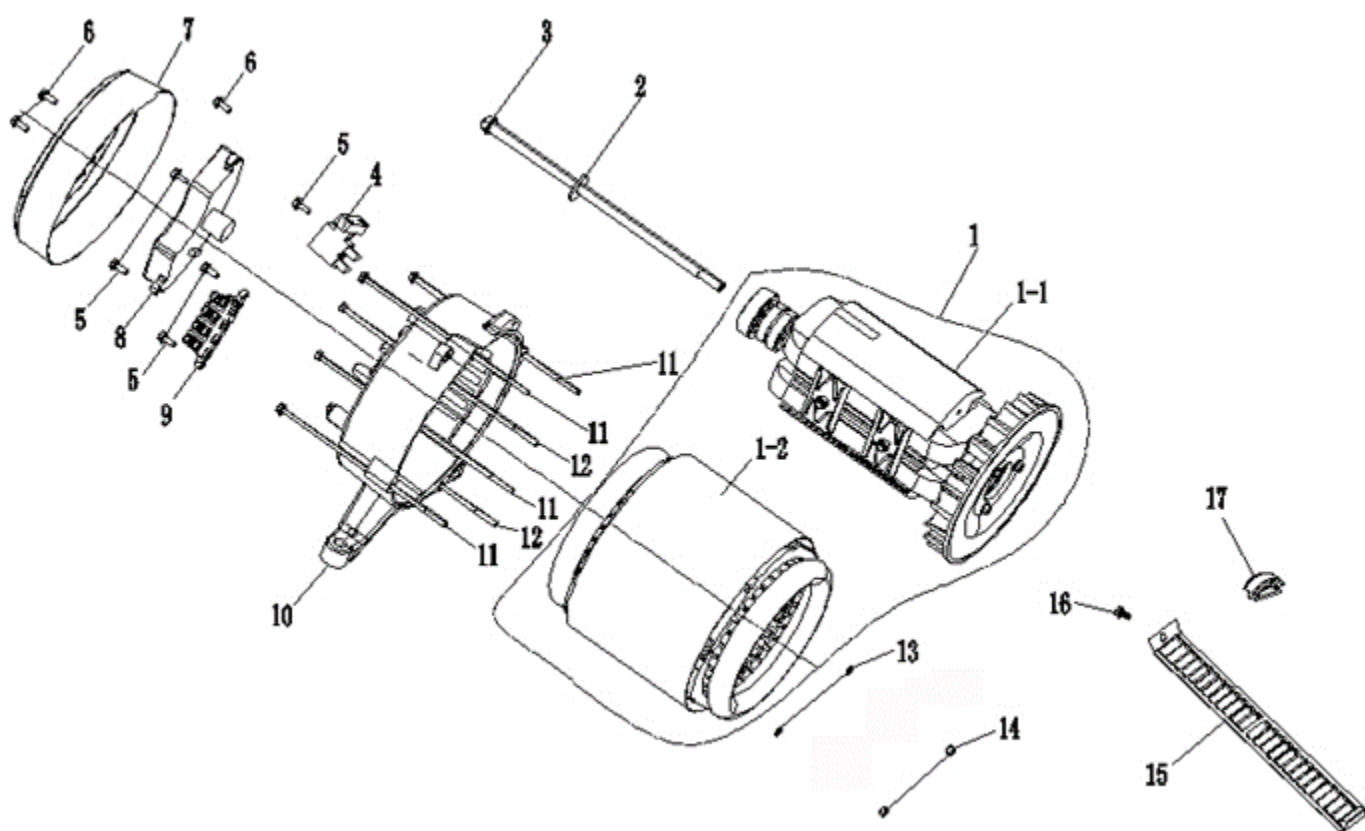


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Alternator assembly	
2	Rotor	
3	Stator	
4	Plain washer	
5	Flange bolt	
6	Carbon brush	
7	Flange bolt	
8	Flange bolt	
9	Alternator end cover	
10	Voltage regulator	
11	Wiring board	
12	Alternator bracket	
13	Flange bolt	
14	Flange bolt	
15	Spring Washer	
16	Lock nut	
17	Windshield	
18	Flange bolt	
19	Rubber Boots	
20	Supporting member	
21	Flange bolt	

FRAME

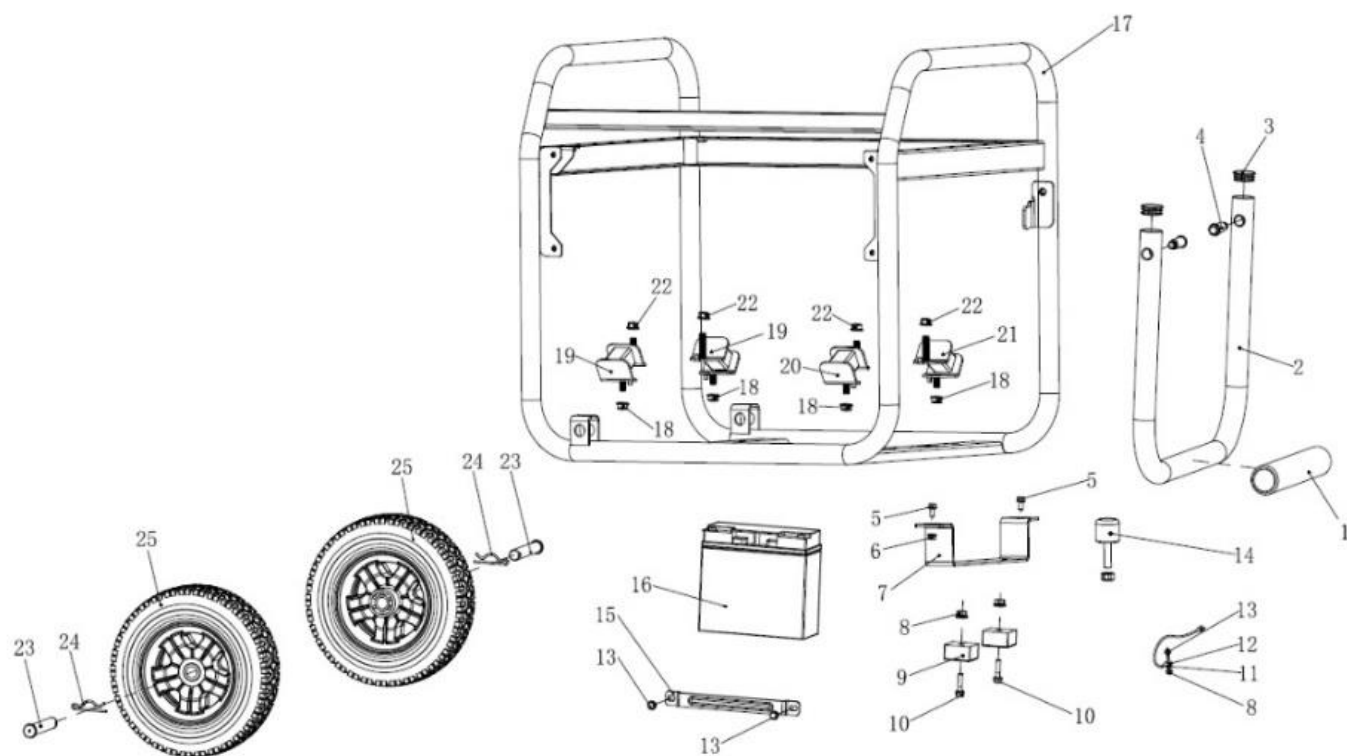


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Handlebar rubber cover	
2	Handlebar components	
3	Handlebar plastic plug	
4	Handle fixing pin	
5	Flange nut	
6	Flange bolt	
7	Support	
8	Flange nut	
9	Frame Anti-vibration seat	
10	Flange bolt	
11	Wave spring	
12	Ground wire	
13	Flange bolt	
14	Vibration absorb	
15	Battery board	
16	Battery board	
17	Frame components	
18	Flange nut	
19	Vibration absorb	
20	Vibration absorb A	
21	Vibration absorb B	
22	Flange nut	
23	Axle	
24	Flat washer	
25	Wheel assembly	
26	Clip, dowel pin	

CYLINDER HEAD ASSEMBLY

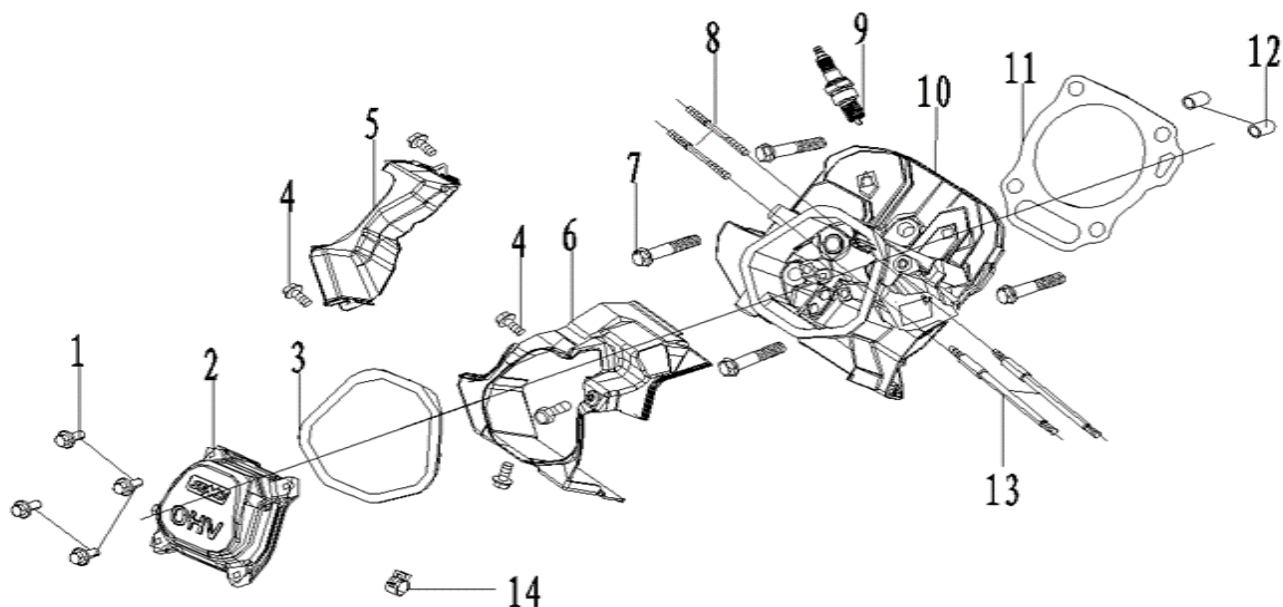


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	BOLT	
2	COVER COMP. HEAD	
3	GASKET, HEAD COVER	
4	BOLT	
5	WIND COVER, DOWN	
6	WIND COVER	
7	BOLT	
8	BOLT, STUD, EXHAUST	
9	SPARK PLUG	SP90004
10	CYLINDER HEAD COMP	SP10240
11	GASKET, HEAD COVER	
12	DOWEL PIN	
13	BOLT, STUD, INTAKE	
14	CLAMP	
15	TUBE, BREATHER	

CRANKCASE ASSEMBLY

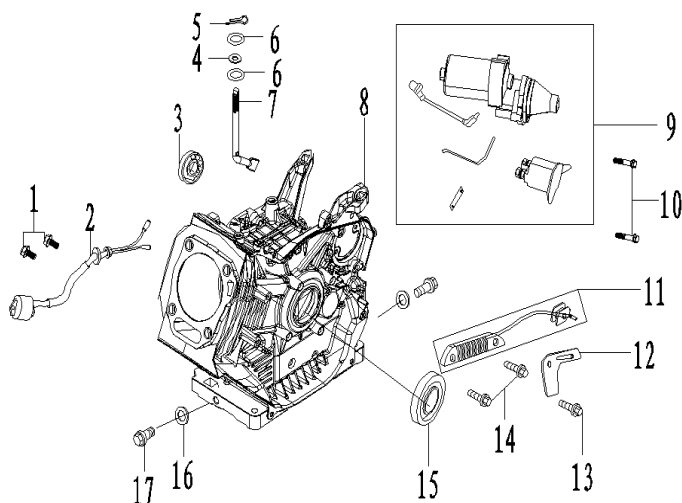


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	BOLT	
2	ENGINE OIL SENSOR	
3	BEARING	
4	OIL SEAL	
5	PIN, LOCK	
6	WASHER	
7	SHAFT, GOVERNOR	
8	CRANKCASE	
9	START MOTOR	
10	BOLT	
11	CHARGING COIL	
12	CRIMPING BOARD	
13	BOLT	
14	BOLT	
15	OIL SEAL	
16	WASHER	
17	BOLT	

CRANKCASE COVER

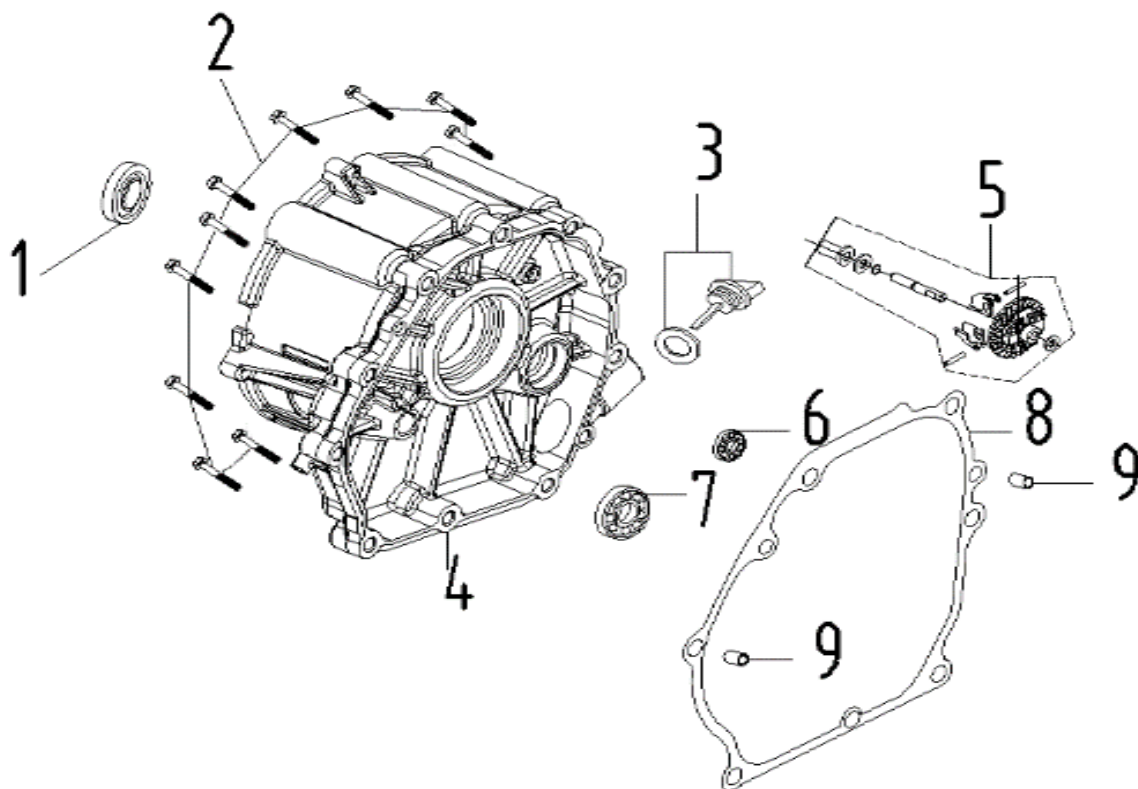


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	OIL SEAL	
2	BOLT	
3	DIPSTICK ASSY	
4	CRANKCASE COVER	
5	GOVERNOR GEAR KIT	
6	BEARING	
7	BEARING	
8	GASKET, CRANKCASE COVER	SP10262
9	DOWEL PIN	

CRANKSHAFT PISTON

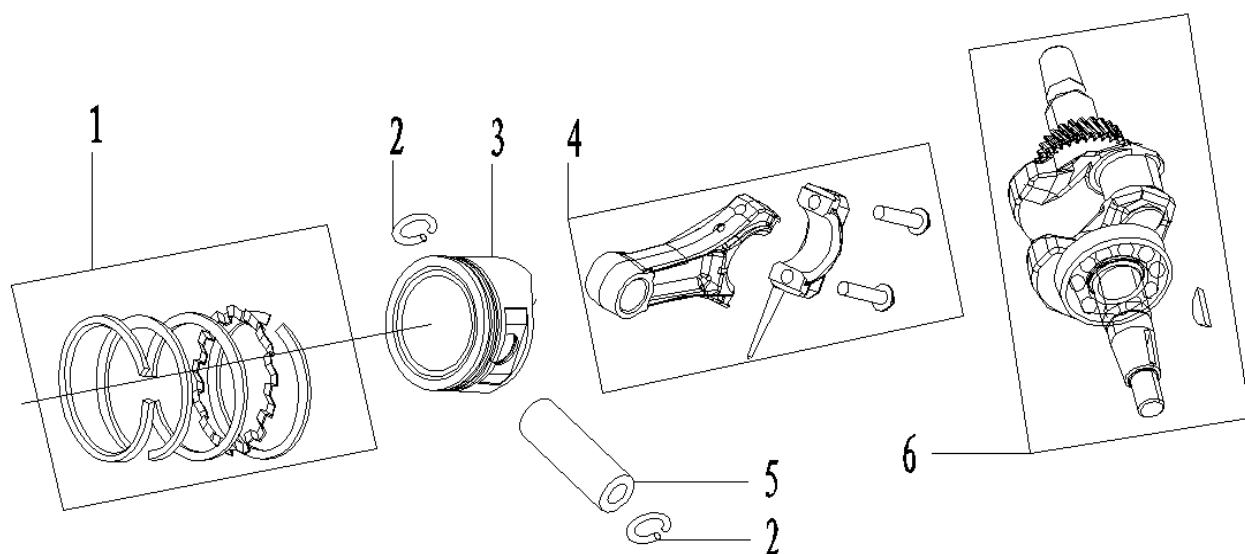


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	RING SET,PISTON	SP10253
2	CLIP,PISTON PIN	
3	PISTON	
4	CONNECTING ROD ASSY	SP10254
5	PIN,PISTON	SP10263
6	CRANKSHAFT ASSY	

CAMSHAFT

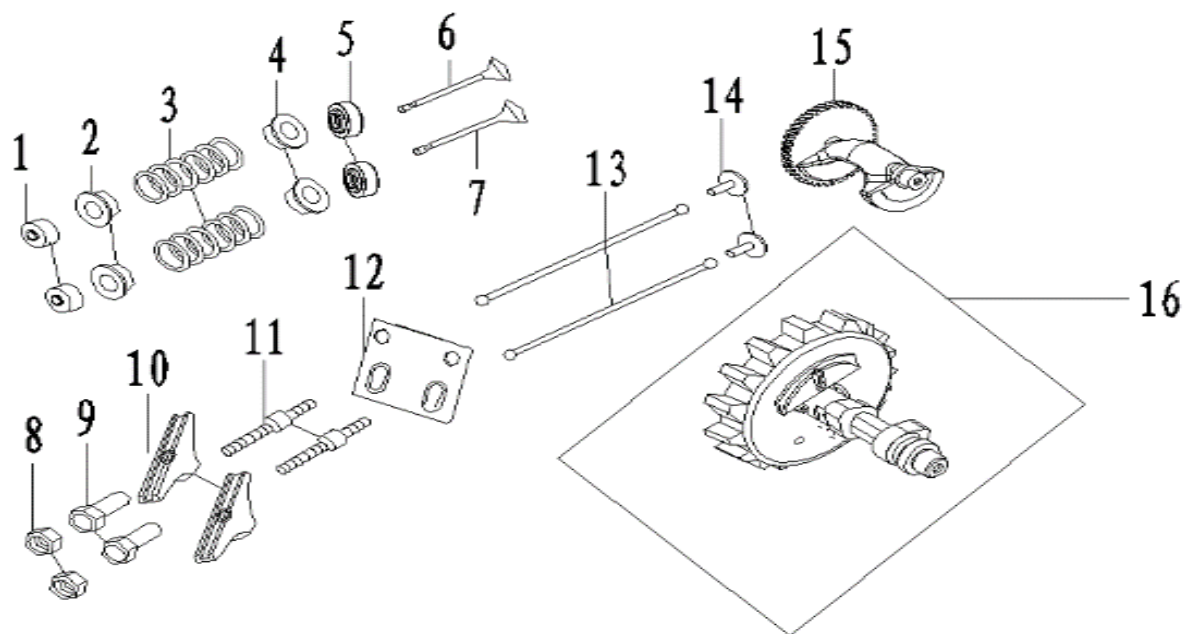


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	ROTATOR, VALVE	
2	RETAINER, VALVE SPRING	
3	SPRING, VALVE	
4	RETAINER, VALVE BOTTOM	
5	OIL SEAL	
6	VALVE, EXHAUST	
7	VALVE, INTAKE	
8	NUT, VALVE ADJUSTING	
9	ROCKER SHAFT	
10	ROCKER ARM	
11	BOLT VALVE	
12	PLATE, PUSH ROD GUIDE	
13	PUSH ROD	
14	LIFTER, VALVE	
15	BALANCE SHAFT	SP10260
16	CAMSHAFT, ASSY	SP10261

CARBURETOR

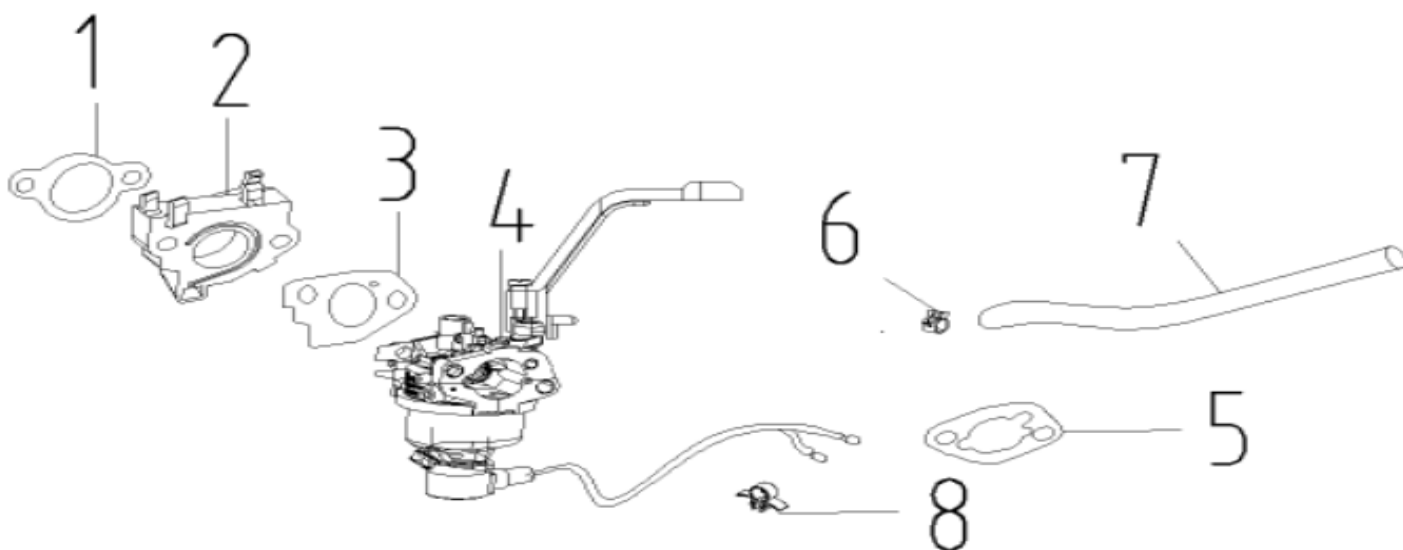


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	GASKET,INTAKE	SP90003
2	INSULATOR,CARBURETOR	
3	GASKET,CARBURETOR	
4	CARBURETOR	
5	GASKET,AIR CLEANER	
6	CLIP,FUEL PIPE	
7	FUEL PIPE	
8	WIRE CLIP	

RECOIL STARTER

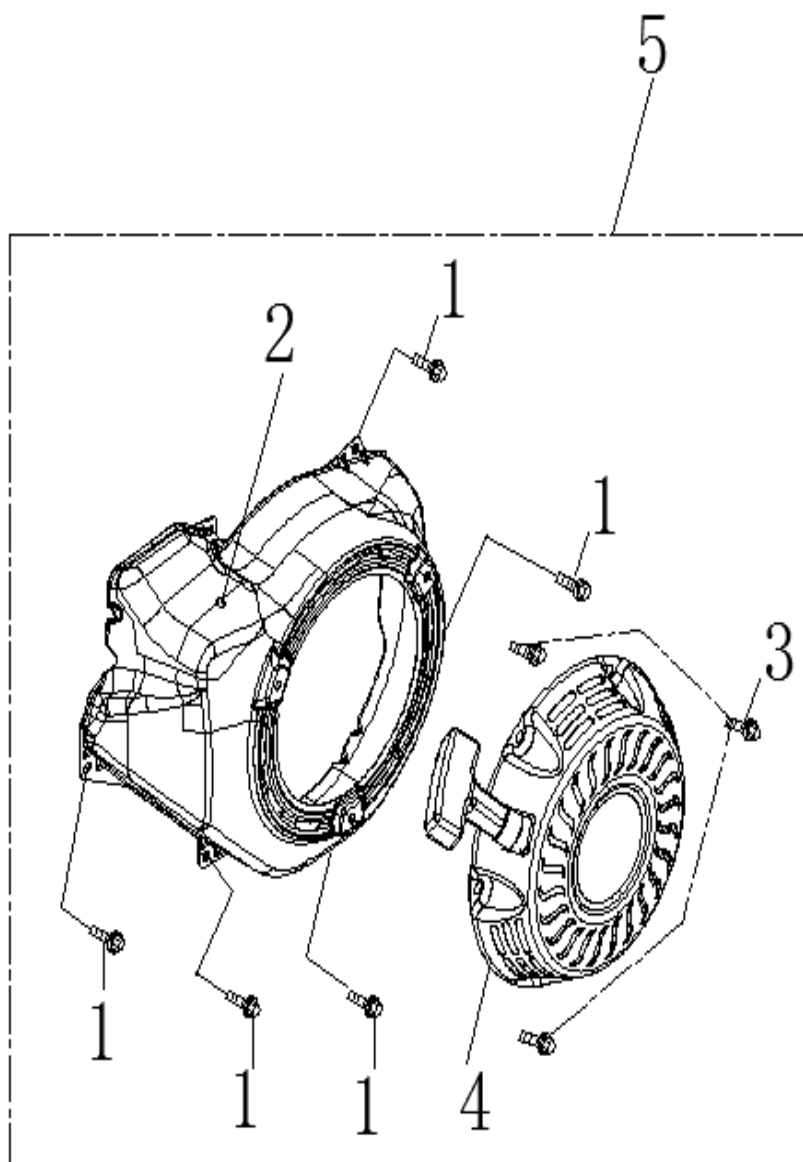


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	BOLT,M6×12	SP10257
2	WIND GUIDER,RECOIL	
3	BOLT,FLANGE	
4	RECOIL STARTER PULLER	
5	RECOIL STARTER COMP	

SPEED CONTROL

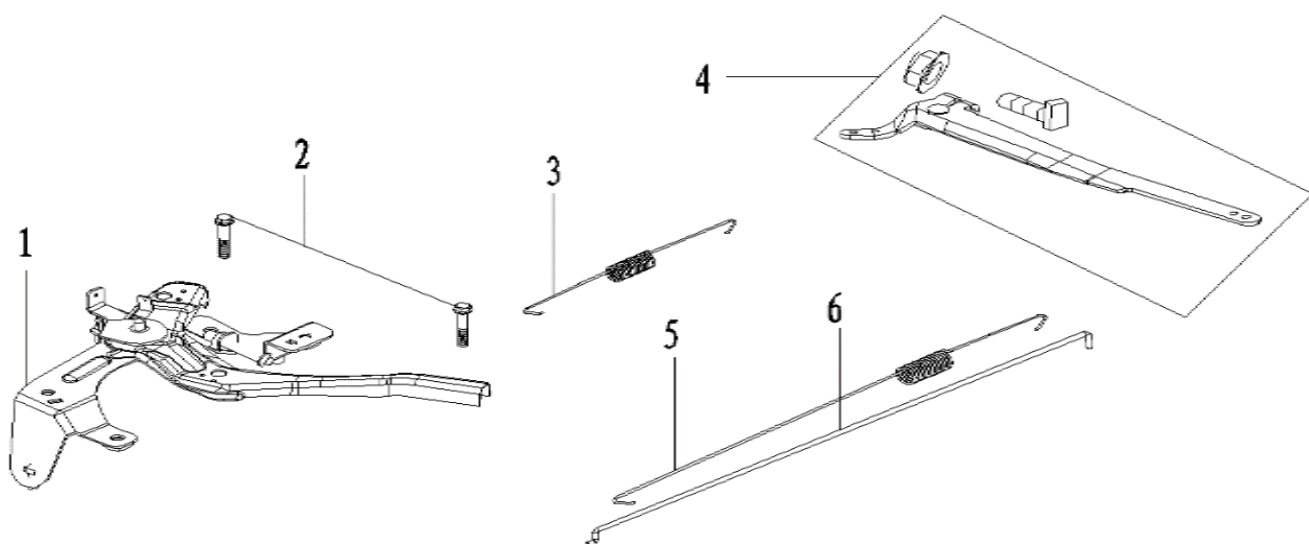


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	SPEED CONTROL,ASSY	
2	BOLT	
3	SPRING,CABLE RETURN	
4	HANDLE,SPEED CONTROL	
5	SPRING,THROTTLE RETURN	
6	ROD,GOVERNOR	

FLYWHEEL

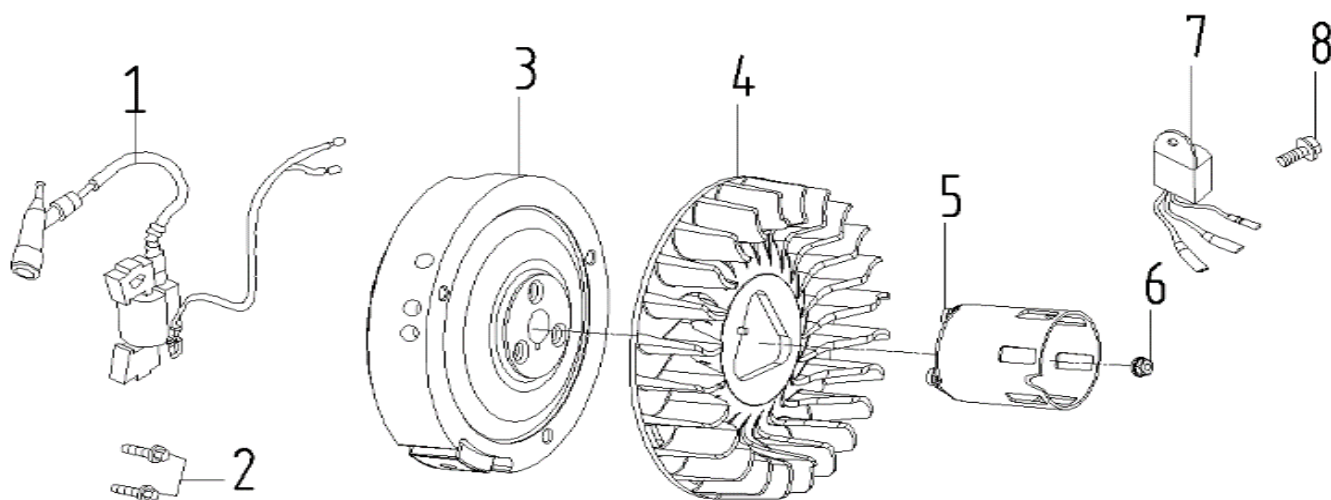


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	WIRE,ENGINE SWITCH	
2	BOLT,FLANGE	
3	FLYWHEEL COMP	
4	FAN COOLING	
5	PULLEY,STARTER	
6	NUT SPECIAL	
7	OIL ALARM	SP10259
8	BOLT,FLANGE	

AIR CLEANER

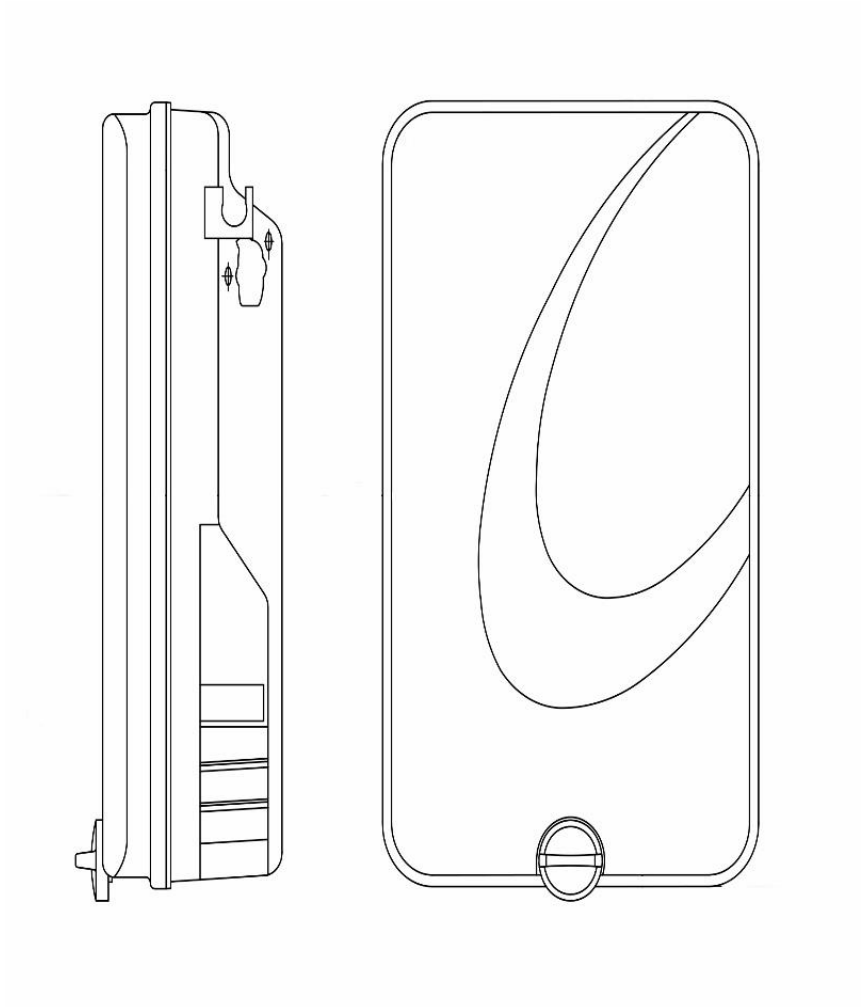


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	AIR CLEANER ASSY	SP10249
2	AIR CLEANER ELEMENT	SP10250

MUFFLER

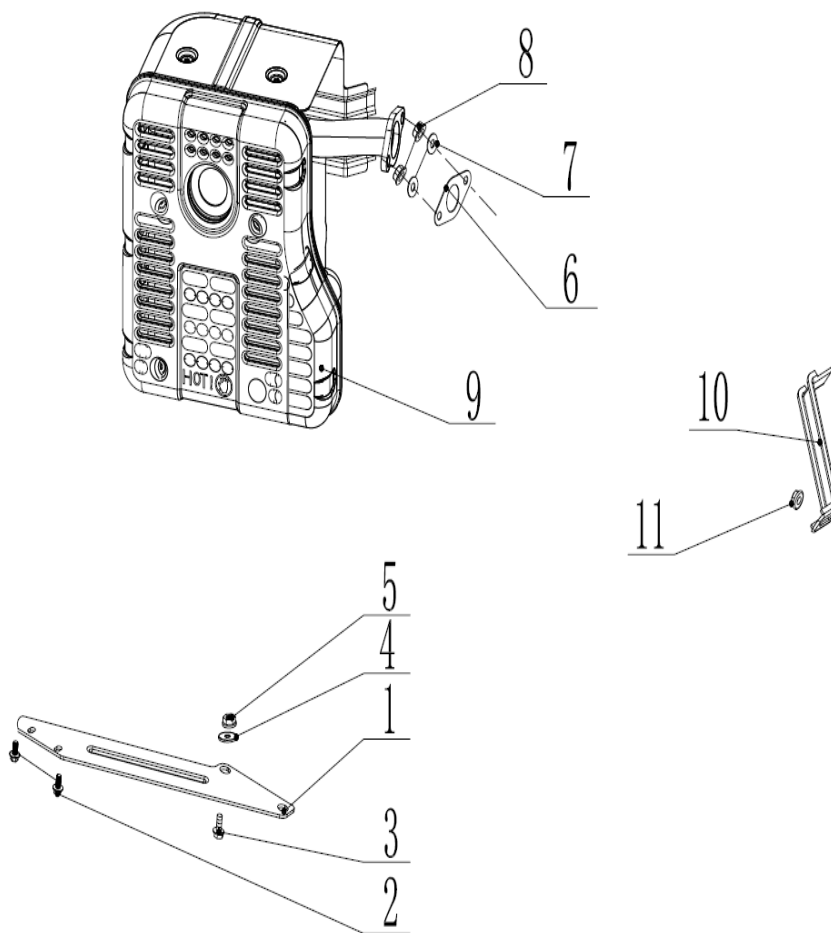

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Support part	
2	Flange bolt	
3	Flange bolt	
4	Washer	
5	Flange nut	
6	Muffler washer	
7	Spring washer	
8	Hex nut	
9	Muffler	
10	Air cleaner support	
11	Flange nut	

CONTROL PANEL

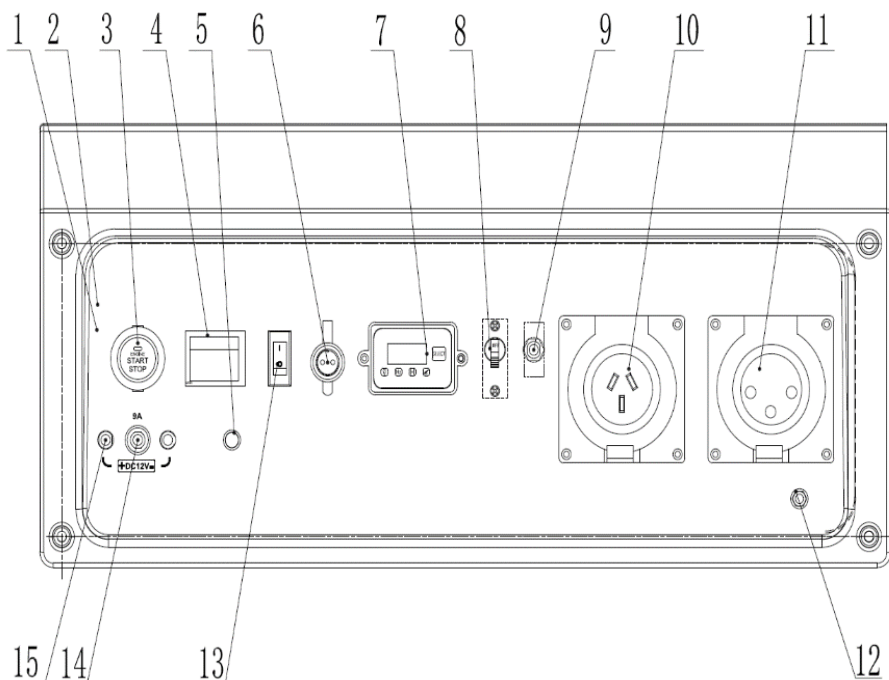

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Control panel assembly	
2	Panel decal	
3	Switch	
4	Switch	
5	Power indicator	
6	Socket	
7	Four in one table	
8	Circuit breaker	
9	AC Circuit breaker	
10	Socket	
11	Socket	
12	Grounding terminal	
13	Switch	
14	DC Circuit breaker	
15	Terminal	

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au