

MAXWATT®


POWER WHEN YOU NEED IT

SPARE PARTS CATALOGUE




MXPW3200T

MACHINE COMPONENTS

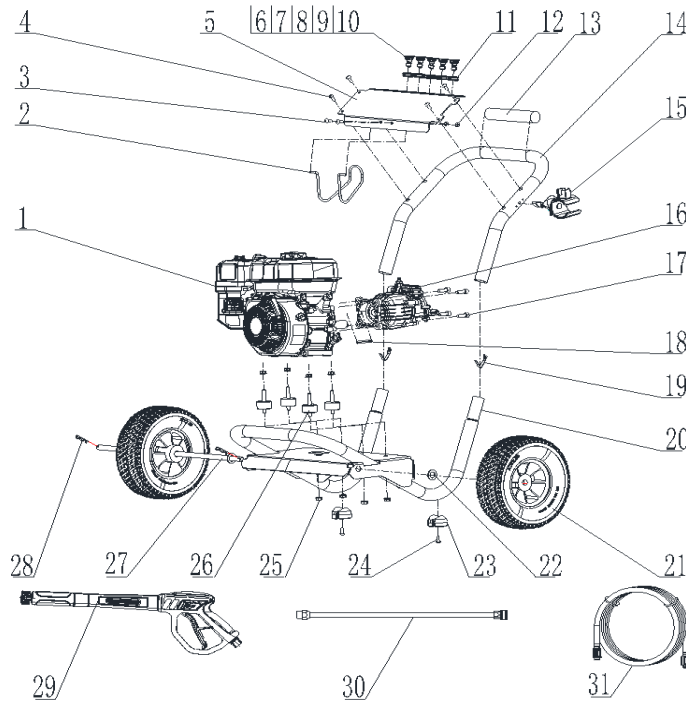


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Engine Assembly	
2	High Pressure Hose Hanger	MXPW3200/T-001
3	Hexagon Socket Head Bolt	
4	Hexagon Socket Head Bolt	
5	Storage Panel	MXPW3200/T-002
6	0° Nozzle	MXPW3200/T-003
7	15° Nozzle	MXPW3200/T-004
8	25° Nozzle	MXPW3200/T-005
9	40° Nozzle	MXPW3200/T-006
10	Nozzle	MXPW3200/T-007
11	Nozzle Holder	MXPW3200/T-008
12	Nylon Nut	
13	Foam Grip	MXPW3200/T-009
14	Handle Tube Assembly	MXPW3200/T-010
15	Gun Holder Assembly	MXPW3200/T-011
16	Axial Cam Pump	
17	Hexagon Socket Cylindrical Head Bolt	
18	Flat Key	
19	V-clip	
20	Frame Assembly	MXPW3200/T-013
21	Wheel Assembly	
22	Flat Washer	MXPW3200/T-014
23	Damping Pad	MXPW3200/T-015
24	Hexagon Socket Head Bolt	
25	Hex Flange Nut	
26	Stud Damping Seat	
27	Axle	MXPW3200/T-016
28	Locking Clip of Locating Pin	
29	Spray Gun	MXPW3200/T-017
30	Spray Wand	MXPW3200/T-018
31	High Pressure Hose	MXPW3200/T-019

PUMP ASSEMBLY

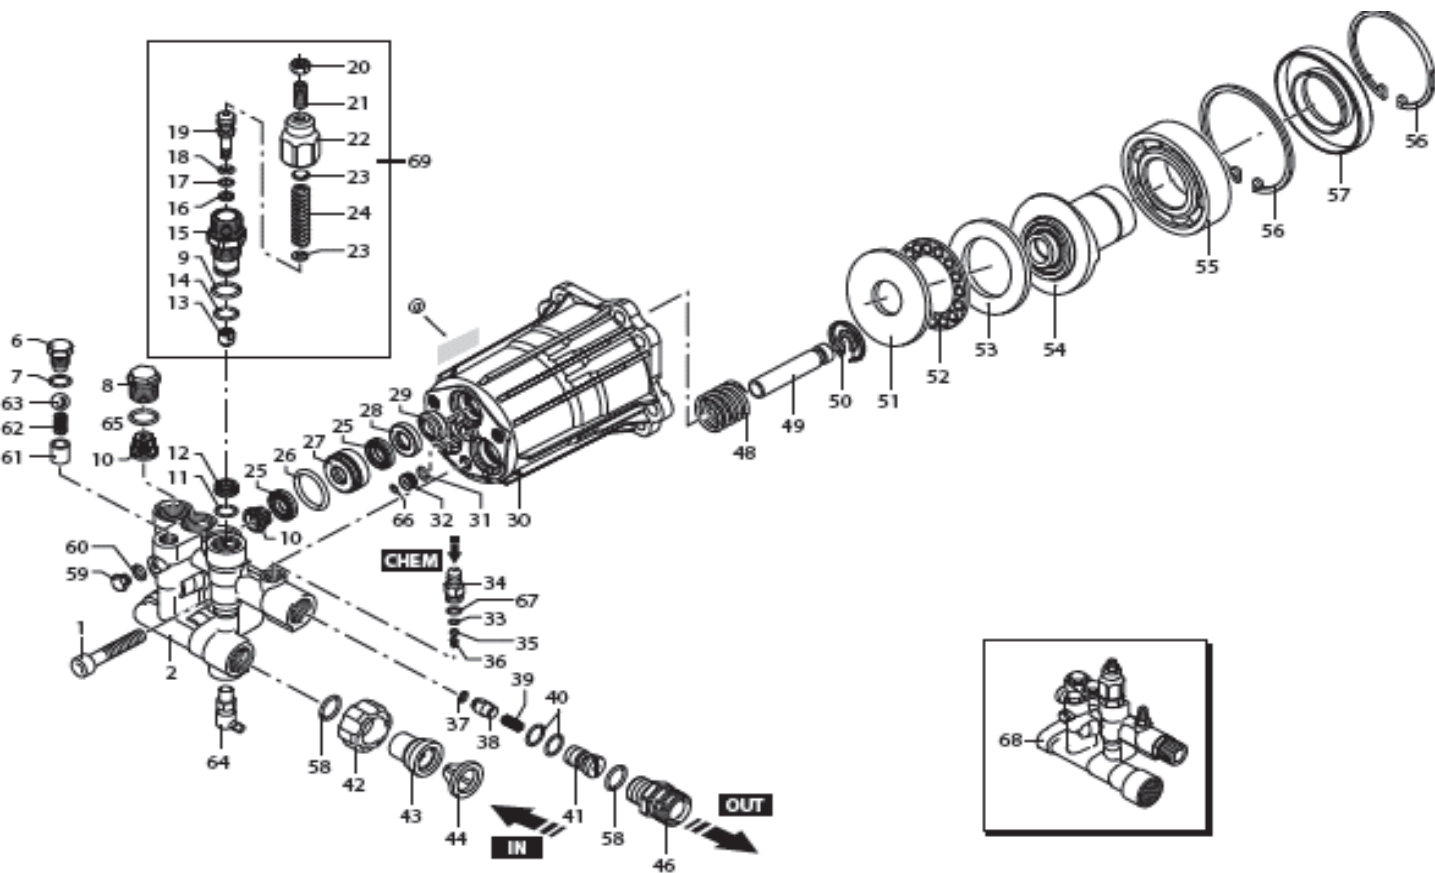

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Screw	
2	Head	
3	Screw	
4	O-ring	
5	Plug	
6	O-ring	
7	Complete Valve	
8	O-ring	
9	Seat	
10	Shutter	
11	O-ring	
12	Piston Guide	
13	Ring	
14	O-ring	
15	O-ring	
16	Piston	
17	Nut	
18	Screw	
19	Insert	
20	Wobble Plate	
21	Spring	
22	Water Seal	
23	O-ring	
24	Bushing	
25	Bushing	
26	Oil Seal	
27	Pump Body	
28	O-ring	
29	Plug	
30	O-ring	
31	Hose Tail	
32	Ball	
33	Spring	
34	O-ring	
35	Valve	
36	Spring	
37	O-ring	
38	Injector	
39	Fitting	
40	Fitting	
41	Filter	
42	Fitting	
43	Spring	
44	Piston	
45	Lock	
46	Fifth Wheel	
47	Fifth Wheel	
48	Fifth Wheel	
49	Wobble Plate	
50	Wobble Plate	
51	Bearing	
52	Ring	
53	Ring	
54	O-ring	
55	Plug	
56	Washer	
57	Seat	
58	Spring	
59	Ball	
60	Valve	
61	O-ring	
62	Plug	
63	O-ring	
64	Head Assembly	
65	Regulation Valve	

ENGINE EXPLODED VIEW

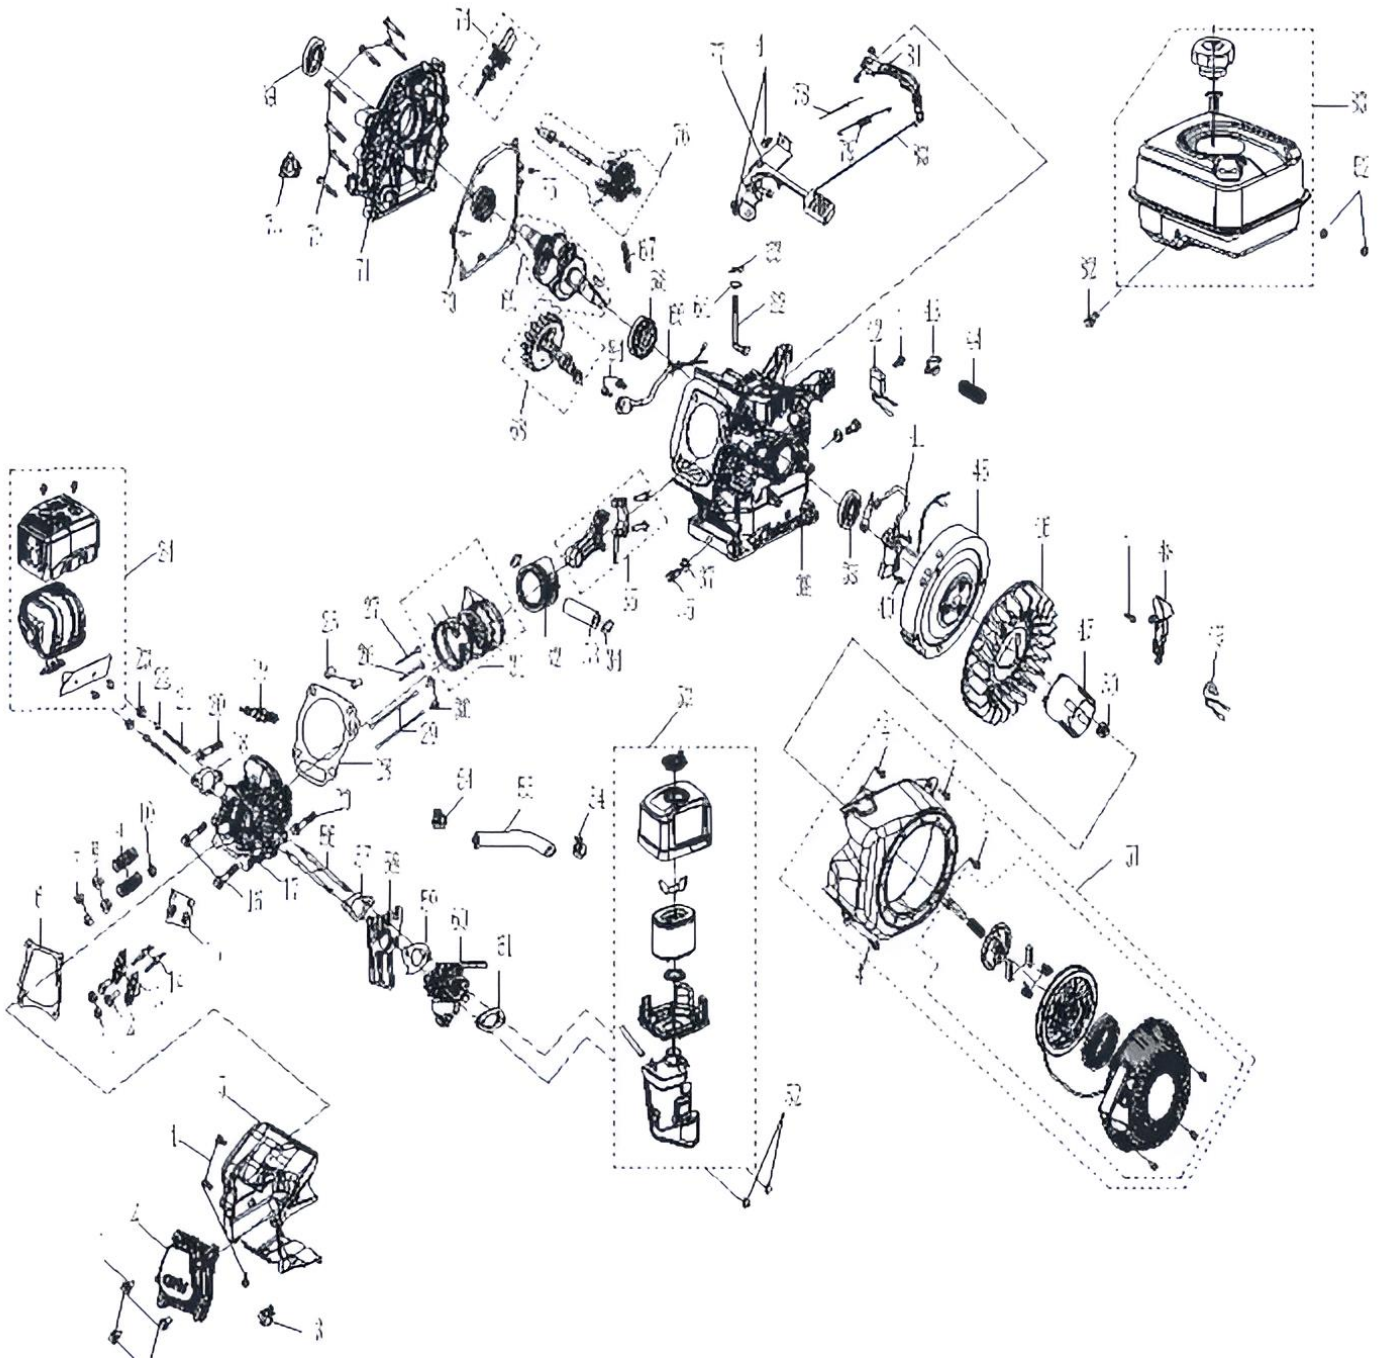

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	
1	Bolt	
2	Cylinder Head Cover Assembly	
3	Clamp	
4	Bolt	
4	Bolt	
4	Bolt	
4	Bolt	
5	Wing Scooper	
6	Cylinder Head Cover Gasket	
7	Air Lock Clamp	
8	Valve Spring Seat	
9	Valve Spring	
10	Intake Valve Oil Shield	
11	Nut	
12	Swing Arm Shaft	
13	Swing Arm For Valve	
14	Swing Arm Shaft Bolt	
15	Push Rod Plate	
16	Bolt	
17	Cylinder Head Assembly	
18	Muffler Gasket	
19	Spark Plug Parts	MXPW3200/T-020
20	Bolt	
21	Exhaust Stud	
22	Spring Washer	
23	Nut	
24	Muffler Component	MXPW3200/T-021
25	Pin	
26	Inlet Valve	
27	Exhaust Valve	
28	Cylinder Head Gasket	
29	Pushing Rod For Valve	
30	Rod For Valve	
31	Piston Ring Assembly	
32	Piston	
33	Piston Pin	
34	Clip Cycle	
35	Connecting Rod Assembly	
36	Bolt	
37	Aluminium Gasket	
38	Crankcase	
39	Oil Seal	
40	Bolt	
41	Ignition Coil Unit	MXPW3200/T-022
42	Oil Alarm	MXPW3200/T-023
43	Wire Clip	
44	Clipping Pipe	
45	Fly Wheel	
46	Fan	
47	Starting Cup	
48	Side Windshield	
49	Switch	MXPW3200/T-023
50	Nut	
51	Recoil Starter Assembly	MXPW3200/T-024
52	Nut	
53	Air Filter Assembly	MXPW3200/T-024
	Air Filter Element	MXPW3200/T-025
54	Clamp	
55	Fuel Pipe	MXPW3200/T-025
56	Air Intake Stud	
57	Air Intake Gasket	
58	Carburetor Connection Block	
59	Carburetor Washer	MXPW3200/T-026
60	Carburetor Assy	
61	Air Filter Gasket	MXPW3200/T-027
62	Shaft, Governor	
63	Locating Pin Lock Clamp	
64	Pendulum Rod Gasket	
65	Oil Sensor	MXPW3200/T-028
66	Bearing	
68	Camshaft Assembly	
69	Crankshaft Assembly	
70	Crankcase Cover Gasket	
71	Crankcase Cover	
72	Bolt	
73	Oil Plug Assembly	MXPW3200/T-029
74	Dipstick	MXPW3200/T-030
75	Pin	
76	Speed Control Gear Assembly	MXPW3200/T-031
77	Governor Assembly	
78	Reset Spring	
79	Trimmer Spring	
80	Speed Regulating Rod	
81	Governor Arm Unit	
84	Bolt	

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au