



SPARE PARTS CATALOGUE




MX13000IS

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	
2	Plug	
3	Upper Cover Plate	
4	Screws	
5	Fuel Tank Sealing Rubber Strip	
6	Bolt	
7	Plain Washer	
8	Fuel Tank Assembly	SP13000-002
	Fuel Cap	SP13000-050
9	Filter Assembly	SP13000-003
10	Wire Clamp	
11	Rubber Strip	
12	Oil Radiator Hood Assembly	SP13000-004
13	Clamp	
14	Air Vent Tube	
15	Fuel Pipe	SP13000-005
16	Clamp	
17	Fuel Pipe	SP13000-006
18	Bolt	
19	Oil Radiator Outlet Cover Plate	
20	Bolt	
21	Cover Plate	
22	Screws	
23	Nut	
24	Mounting Plate	
25	Bolt	
26	Brake Component	
27	Washer	
28	Bushing	
29	Plate	
30	Rubber Sleeve	
31	Clip Nut	
32	Inverter Shock Pad	
33	Cross Beam	
34	Bracket	
35	Bracket	
36	Rack Support Group	
37	Bolt	
38	Damping Mount	
39	Intake Air Filter	
40	Screws	
41	Wheel	
42	Plain Washer	
43	Screws	
44	Bolt	
45	Brake Mounting Plate	
46	Supporting Component	
47	Rubber Sleeve	
48	AVR	SP13000-006
49	Inverter Box	
50	Bolt	

51	Control Panel Assembly	SP13000-007
52	Inverter Component	SP13000-008
53	Bolt	
54	Panel Plate	
55	Handle Rubber Cover	
56	Nylon Nut	
57	Bolt	
58	Handle	
59	Bolt	
60	Handle Assembly	
61	Fastening Spring	
62	Pin	
63	Pin	
64	Handle Fixing Seat	
65	Handle Fixing Pin	
66	Handle Fixing Seat	
67	Handle Rubber Cover	
68	Handle Mounting Tube Assembly	
69	Rubber Pad	
70	Cross Beam	
71	Inverter Left Support	
72	Nut	
73	Inverter Right Support	
74	Grounding Harness	
75	Cover Plate	
76	Bottom Plate	
77	Filter	
78	Lead-Acid Battery Mounting Lugs	
79	Harness Unit, Red	SP13000-047
80	Harness Unit, Black	SP13000-048
81	Muffler Support Frame Assembly	
82	Battery	SP13000-009
83	Battery Band	
84	Nut	
85	Engine	SP13000-010
86	Cover Plate	
87	Fixed Plate	
88	Cover Plate	
89	Fixed Plate Mounting Lug	
90	Bolt	
91	Cover Plate	
92	Alternator End Cover	
93	Bolt	
94	Bolt	
95	Pin	
96	Alternator Rubber Sleeve	
97	Stator	SP13000-050
98	Spring Washer	
99	Screws	
100	Rotor	SP13000-011
101	Screw Gasket	
102	Bolt	
103	Alternator Casing	
104	Bolt	
105	Fan	
106	Bolt	
107	Alternator Casing Rubber	
108	Alternator Casing	
109	Cover Plate	
110	Base Plate Assembly	
111	Cover Plate	
112	Base Plate Assembly	
113	Cover Plate	
114	Mounting Plate	
115	Rubber Strip	
116	Muffler Gasket	
117	Spring Washer	
118	Nut	
119	Muffler	
120	Mounting Plate	
121	Muffler Insulation Plate	
122	Muffler Side Panel	

COMPRESSION SPRING

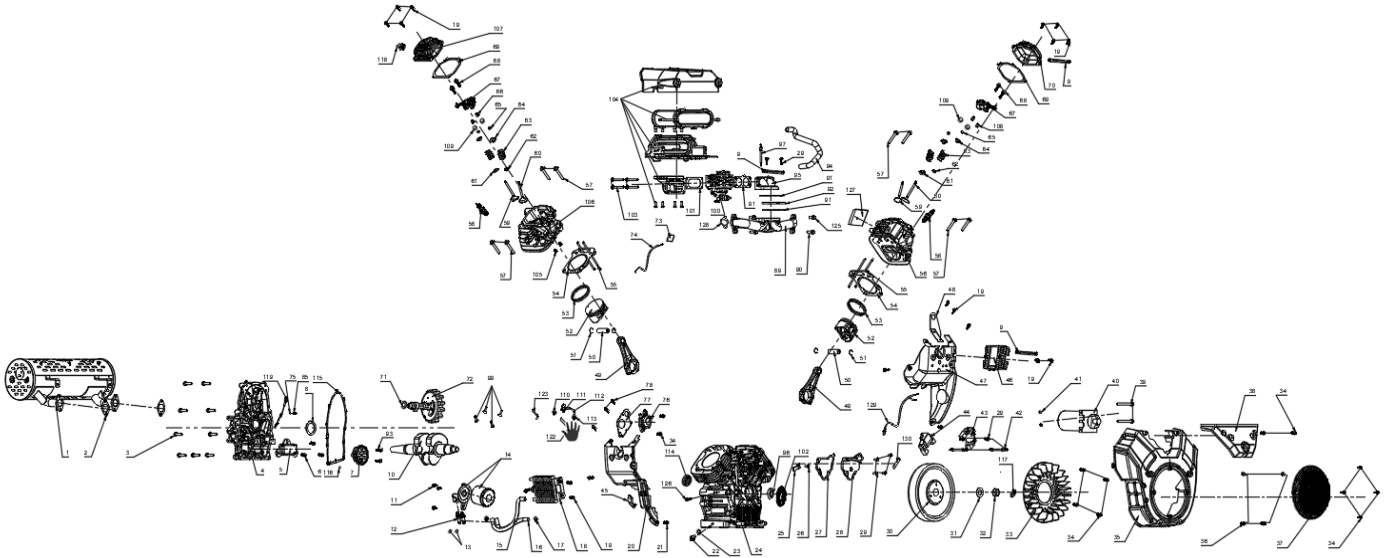

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Muffler Assembly	SP13000-012
2	Muffler Washer	
3	Bolt	
4	Crank Case Cover	SP13000-013
5	Oil Filter Cover	
6	Bolt	
7	Oil Pump	
8	Plain Washer	
9	Wire Clamp	SP13000-014
10	Crankshaft Assembly	
11	Bolt	
12	Joint	SP13000-015
13	O-ring Seal	
14	Oil Filter Cup	
15	Oil Pipe	SP13000-016
16	Oil Pipe	
17	Clamp	SP13000-017
18	Radiator	
19	Bolt	
20	Deflector Hood under Cylinder Head, Left	SP13000-018
21	Bolt	
22	Bolt	
23	Plain Washer	SP13000-019
24	Crank Case	
25	Valve Disc	
26	Breathing Pump Gasket	SP13000-020
27	Breathing Tank Cover Plate	
28	Bolt	
29	Fly Wheel	SP13000-021
30	Plain Washer	
31	Nut	
32	Fan	SP13000-022
33	Bolt	
34	Wing Scooper	
35	Cap Nut	SP13000-023
36	Grass Shield	
37	Trapezoidal Shield	
38	Bolt	SP13000-024
39	Starting Motor	
40	Pin	
41	Stud Bolt	SP13000-025
42	Ignition Coil Component, Left	
43	Ignition Coil Component, Right	
44	Oil Alarm	SP13000-026
45	Voltage Regulator	
46	Deflector Hood under Cylinder Head, Right	
47	Lug	SP13000-027
48	Connecting Rod Assembly	
49	Piston Pin	
50	Piston Pin Clamp Ring	SP13000-028
51	Piston	
52	Piston Ring Assembly	
53	Cylinder Head Gasket	SP13000-029
54	Valve Push Rod	
55	Cylinder Head Assembly	
56	Bolt	SP13000-030
57	Spark Plug Parts	
58	Inlet Valve	
59	Exhaust Valve	SP13000-031
60	Exhaust Valve Spring Seat	
61	Oil Seal	
62	Valve Spring	SP13000-032
63	Valve Spring Seat	
64	Valve Lock Clamp	
65	Valve Rocker Arm	SP13000-033
66	Bolt	
67	Cylinder Head Gasket	
68	Cylinder Cover Assembly	SP13000-034
69	Plain Washer	
70	Camshaft Assembly	

71	Speed Control Module	SP13000-027
72	Temperature Sensor	SP13000-028
73	Steel Ball	
74	Fuel Pump	SP13000-029
75	Mounting Bracket	
76	Bolt	
77	Compression Spring	
78	Connecting Pipe	
79	Exhaust Stud	
80	Carburetor Gasket	SP13000-030
81	Carburetor Connection Block	
88	Carburetor Assembly	
82	Bolt	
83	Exhaust Pipe	
84	Intake Pipe Adapter	
85	Oil Seal	
86	Stud Bolt	
87	Valve Elevator	
88	Carburetor Assembly	
89	Air Filter Gasket	SP13000-031
90	Charging Coil	
91	Air Intake Stud	
92	Air Filter Assembly	SP13000-032
	Air Filter Element	SP13000-033
93	Pin	
94	Cylinder Head Assembly	SP13000-034
95	Cylinder Head Assembly	SP13000-035
96	Pin	
97	Exhaust Valve Rotor	
98	Clamp	
99	Oil Pipe	SP13000-036
100	Oil Pipe	SP13000-037
101	Clamp	
102	Bearing	
103	Crank Case Cover Gasket	
104	O-ring Seal	
105	Flywheel Fan Pressure Disc	
106	Oil Plug Group	
107	Oil Gauge Assembly	
108	Oil Pipe Sleeve	
109	Oil Pipe	SP13000-038
110	Nut	
111	Oil Sensor	SP13000-039
112	Cylinder Head Deflector Cover	
113	Air Intake Gasket	SP13000-040
114	Wiring Harness Parts	
115	Wire Pressing Plate	
ADDITIONAL PARTS		
	63 AMP OUTLET	SP13000-041
	50 AMP CIRCUIT BREAKER	SP13000-042
	PUSH START BUTTON	SP13000-043
	ELECTRONIC START MODULE	SP13000-044
	ELECTRONIC 2 WIRE START MODULE	SP13000-045
	BATTERY SWITCH	SP13000-046

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au