




SPARE PARTS CATALOGUE




MX11000IS

GENERATOR PARTS

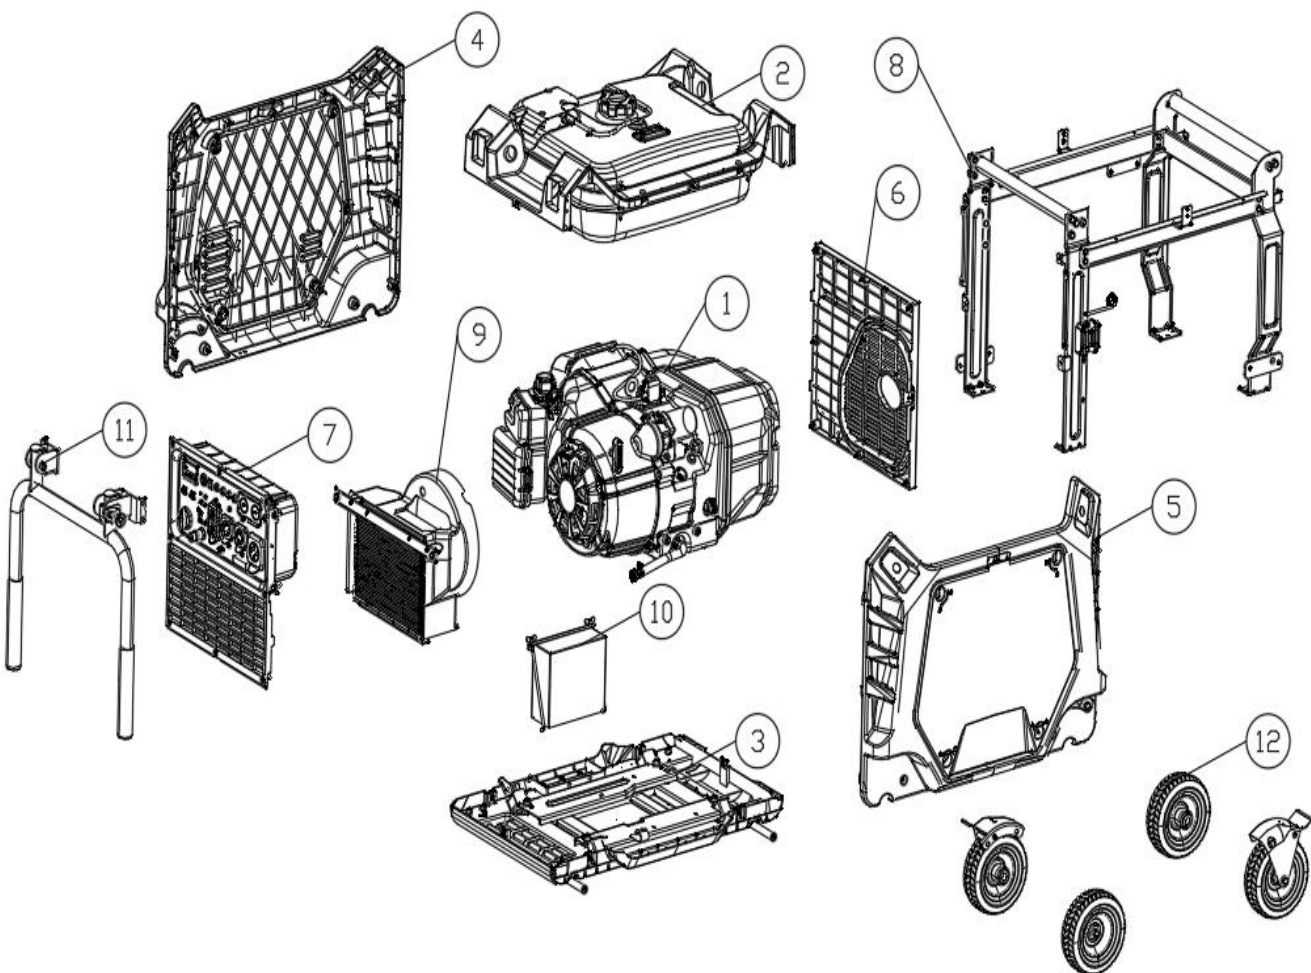


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Engine	SP11000IS-001
2	Fuel Tank	
3	Engine base assembly	
4	Left cover assembly	
5	Right cover assembly	
6	Rear cover assembly	
7	Front cover assembly	
8	Frame	
9	Inverter	
10	Battery	
11	Handle	
12	Wheel	

ENGINE

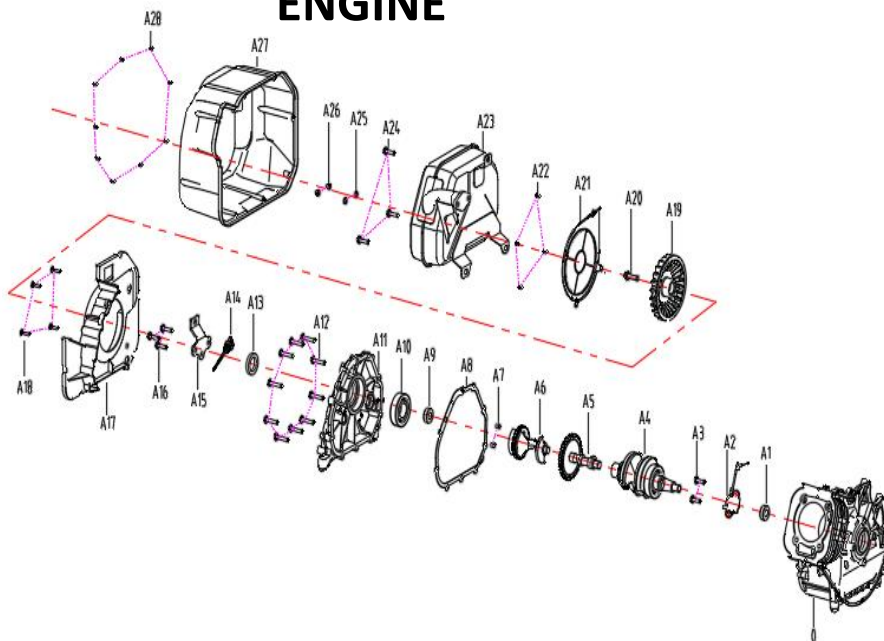

NO.	DESCRIPTION	MAXWATT PART NUMBER
0	Crankshaft case	
1	Bearings	
2	Oil sensor	SP11000IS-002
3	Bolt	
4	Crankshaft	
5	Camshaft	
6	Balance shaft	
7	Pin	
8	Crankcase cover gasket	SP11000IS-003
9	Bearings	
10	Bearings	
11	Crankcase cover	
12	Bolt	
13	Oil seal	
14	Oil dipstick	
15	Muffler mounting bracket	
16	Bolt	
17	Rear fan air hood	
18	Bolt	
19	Fan	
20	Bolt	
21	The rear fan cover plate	
22	Screw	
23	Muffler	SP11000IS-004
24	Bolt	
25	Spring washer	
26	Nut	
27	Muffler wind hood	
28	Screw	


CYLINDER HEAD AND CONNECTING ROD ASSEMBLY

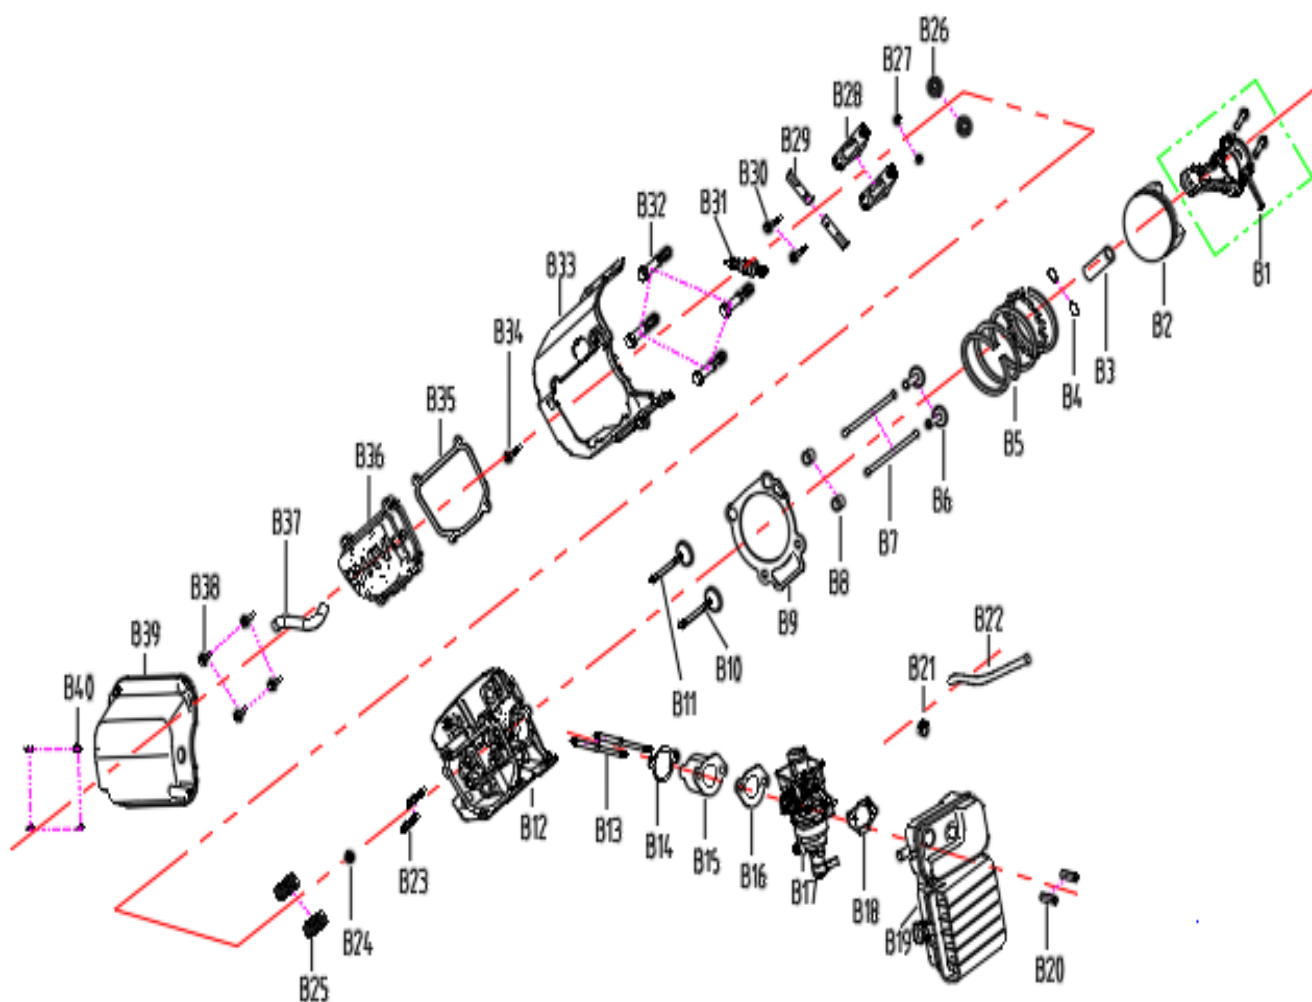




NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Connecting rod	SP11000IS-005
2	Piston	SP11000IS-006
3	Piston pin	
4	Piston pin ring	
5	Piston ring set	
9	Cylinder head gasket	SP11000IS-007
12	Cylinder head	SP11000IS-008
13	Air intake bolt	
6	Valve tappet	SP11000IS-009
7	Valve push rod	
8	Locating pin	
10	Intake valve	
11	Exhaust valve	
23	Exhaust bolt	
24	Oil seal	
25	Valve spring	
26	Valve spring seat	
27	Valve lock clip	
28	Valve rocker assembly	
29	Rocker arm shaft	
30	Bolt	
14	Air inlet gasket	SP11000IS-010
15	Carburetor connection block	
18	Air filter gasket	
16	Carburetor gasket	
17	Carburetor	SP11000IS-011
19	Air filter	SP11000IS-012
20	nut for air filter	
41	Air Filter Element	SP11000IS-013
21	Clamp	SP11000IS-014
22	Fuel pipe	
31	Spark plug	SP11000IS-015
32	Bolt	
33	Cylinder head air intake hood	SP11000IS-016
34	Screw	
35	Cylinder head gasket	SP11000IS-017
36	Cylinder cover assembly	SP11000IS-018
37	Exhaust pipe	SP11000IS-019
38	Bolt	
39	Cylinder head wind hood	
40	Screw	

CRANKSHAFT PISTON

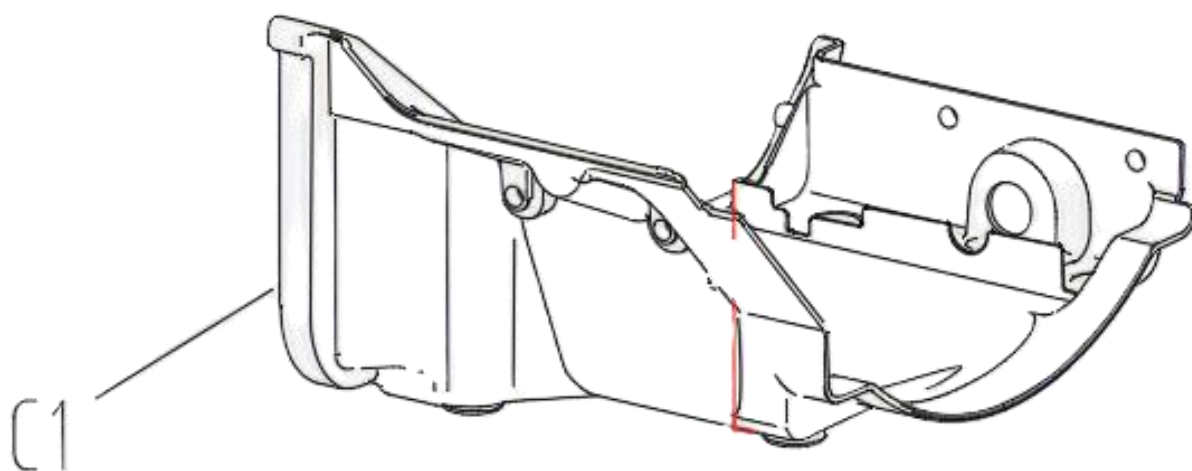


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Air hood under housing	

STARTER ASSEMBLY

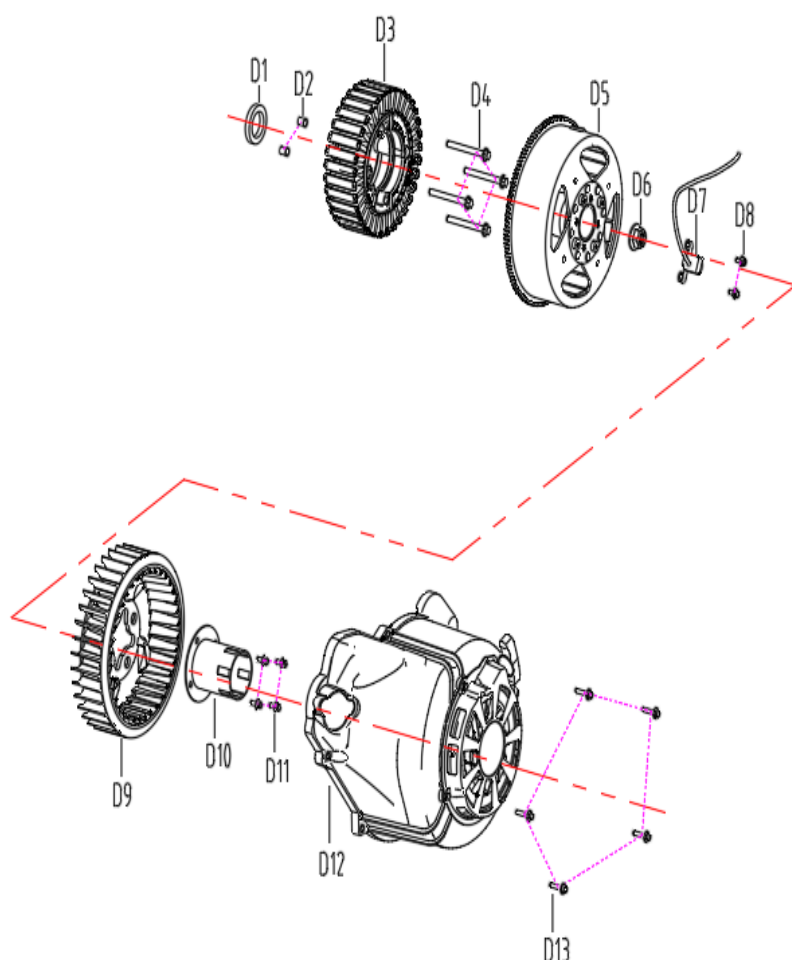


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Oil seal	
2	Locating pin	
3	Stator	SP11000IS-020
5	rotor	
4	Bolt	
6	Nut	
7	Trigger	SP11000IS-021
8	Bolt	
9	Fan	
10	Start cup	
11	Bolt	
12	Recoil start	SP11000IS-022
13	Bolt	

CRANKSHAFT PISTON

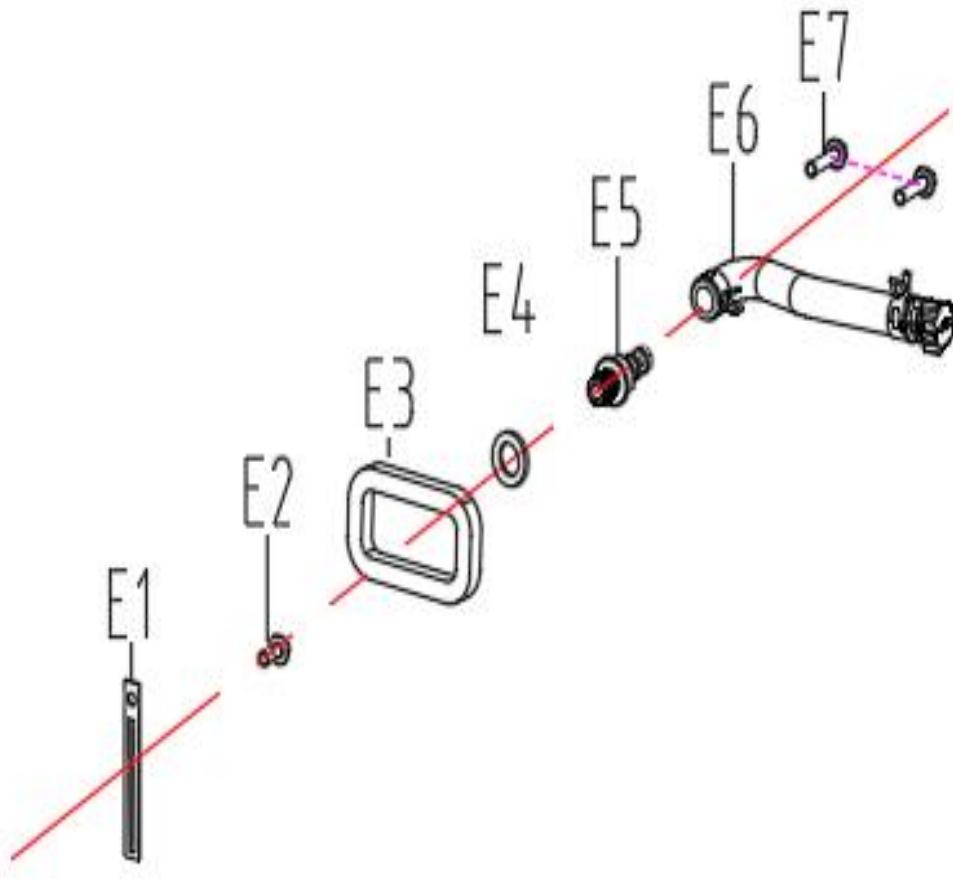


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Wire clip	
2	Bolt	
3	Insulation foam	
4	Aluminum gasket	
5	Bolt	

STARTER MOTOR ASSEMBLY

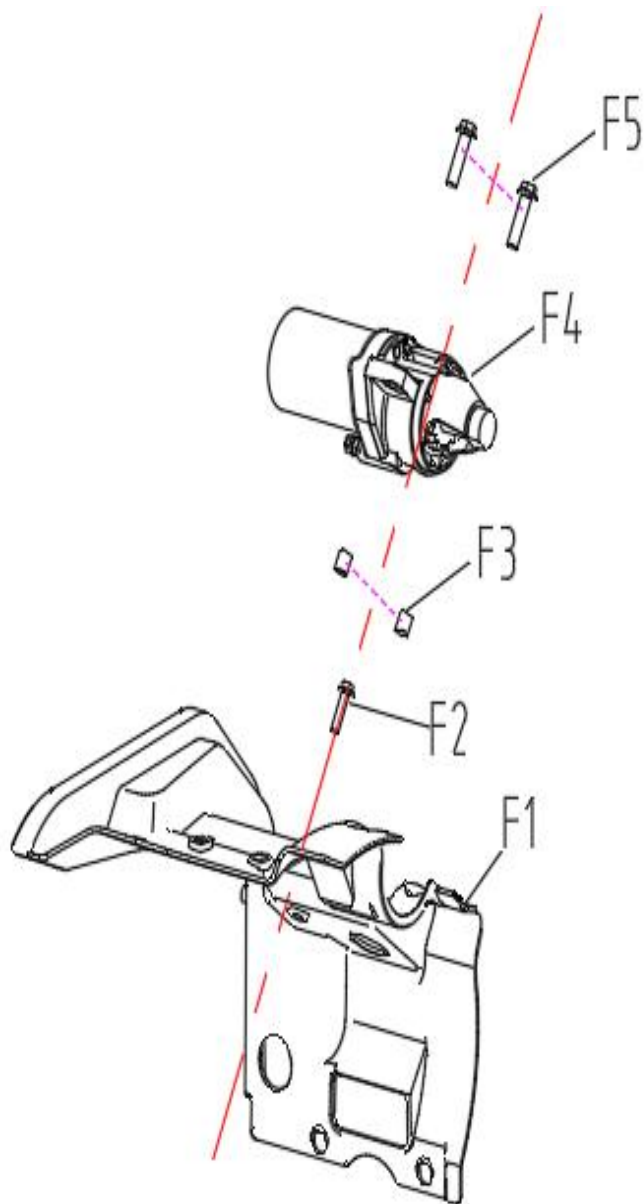


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	The air guide cover on the box	
2	Bolt	
3	Pin	
4	Start motor	SP11000IS-023
5	Bolt	

IGNITOR ASSEMBLY

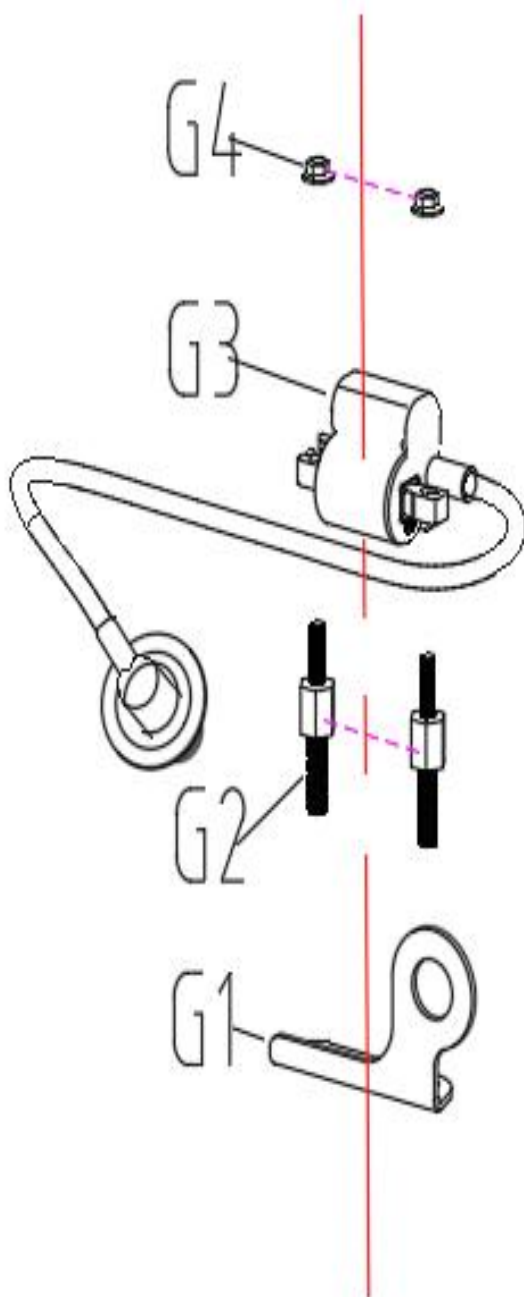


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Hoop ring	
2	Bolt	
3	Ignition controller	SP11000IS-024
4	Nut	

FUEL TANK

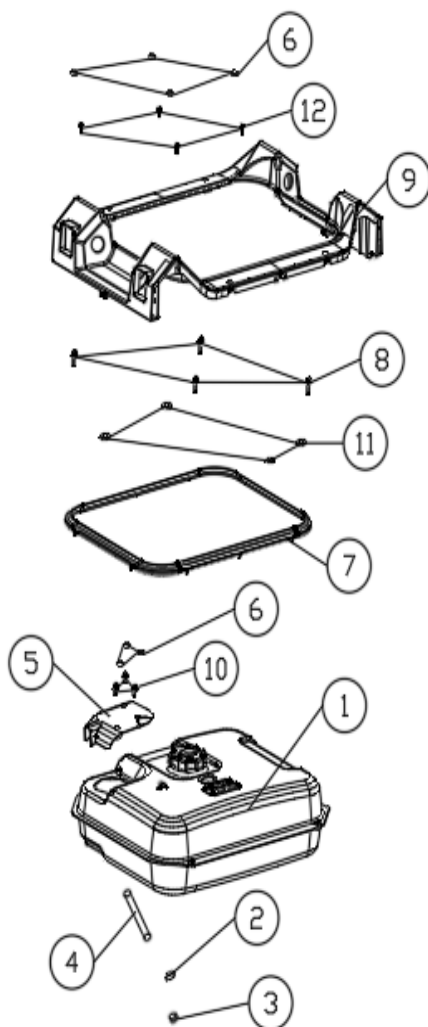


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Fuel tank	SP11000IS-025
2	Clamp	SP11000IS-026
3	Clamp	
4	Fuel pipe	
5	Oil pump cover	
6	Plug	
7	Fuel tank gasket	
8	Bolt	
9	Upper shell assembly	
10	Bolt	
11	Fuel tank gasket	
12	Screw	

ENGINE BASE ASSEMBLY

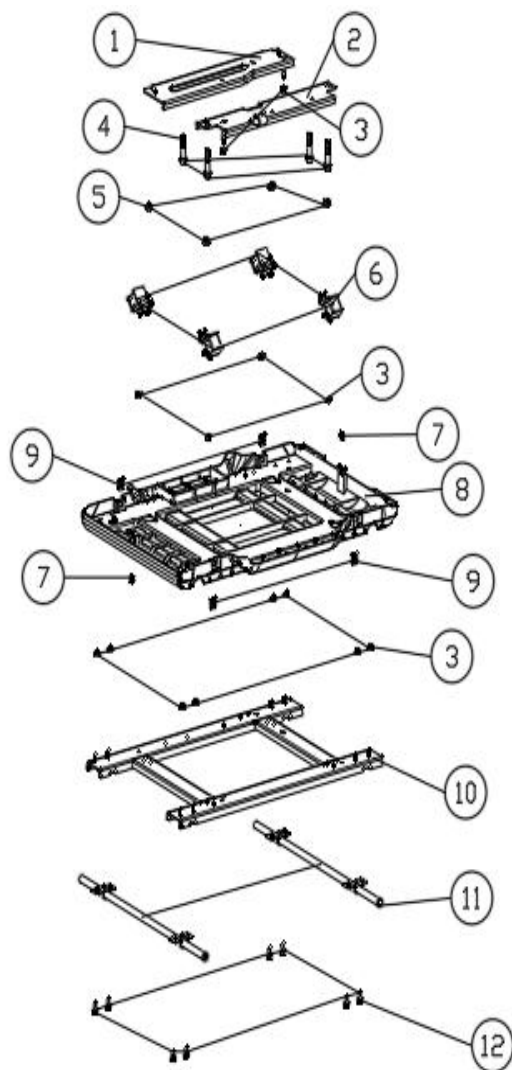


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Engine installation plate 1	
2	Engine installation plate 2	
3	Nut	
4	Bolt	
5	Nut	
6	Damping seat	
7	Clip nut	
8	Power installation base	
9	Clip nut	
10	Engine support frame	
11	Axle	SP11000IS-027
12	Bolt	

LEFT COVER ASSEMBLY

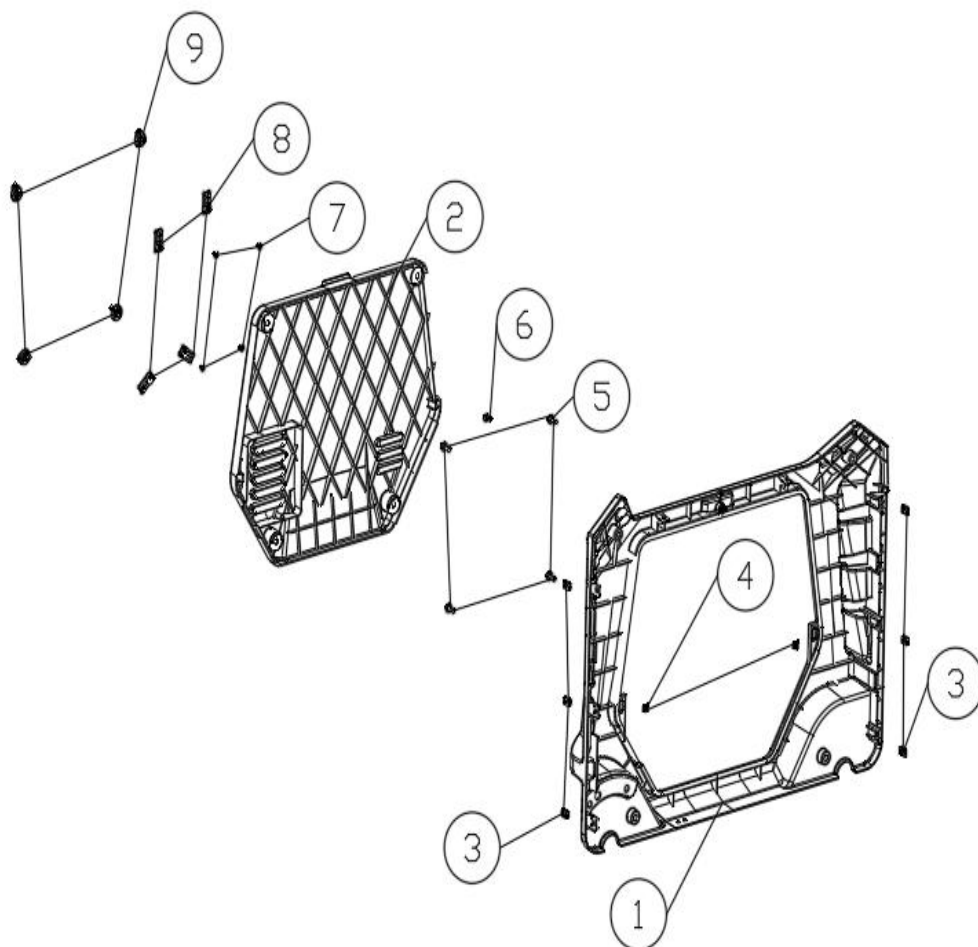


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Left shell assembly	
2	Left side cover assembly	SP11000IS-028
3	Clip nut/M5	
4	Spring clip	
5	Bolt	
6	Bolt	
7	Screw	
8	Limit block	
9	Switch knob	

RIGHT COVER ASSEMBLY

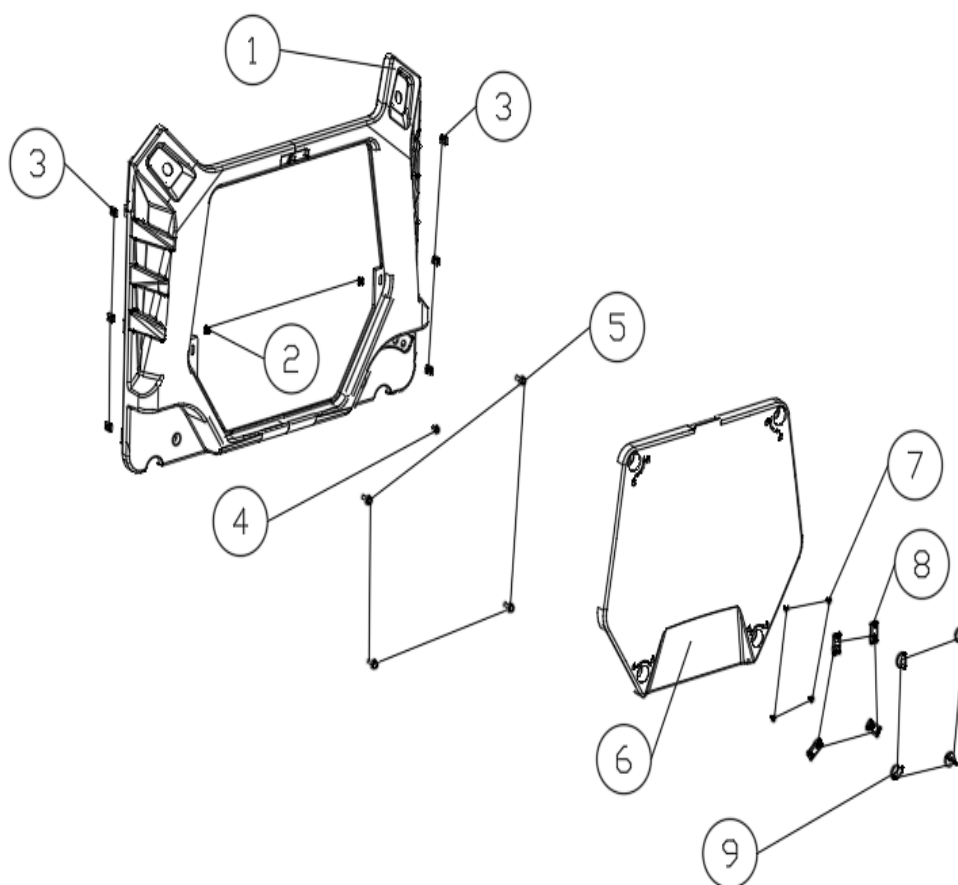


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	The shell assembly right	
2	Spring clip	
3	Clip nut	
4	Bolt	
5	Bolt	
6	Right side cover assembly	SP11000IS-029
7	Screw	
8	Limit block	
9	Switch knob	

REAR COVER ASSEMBLY

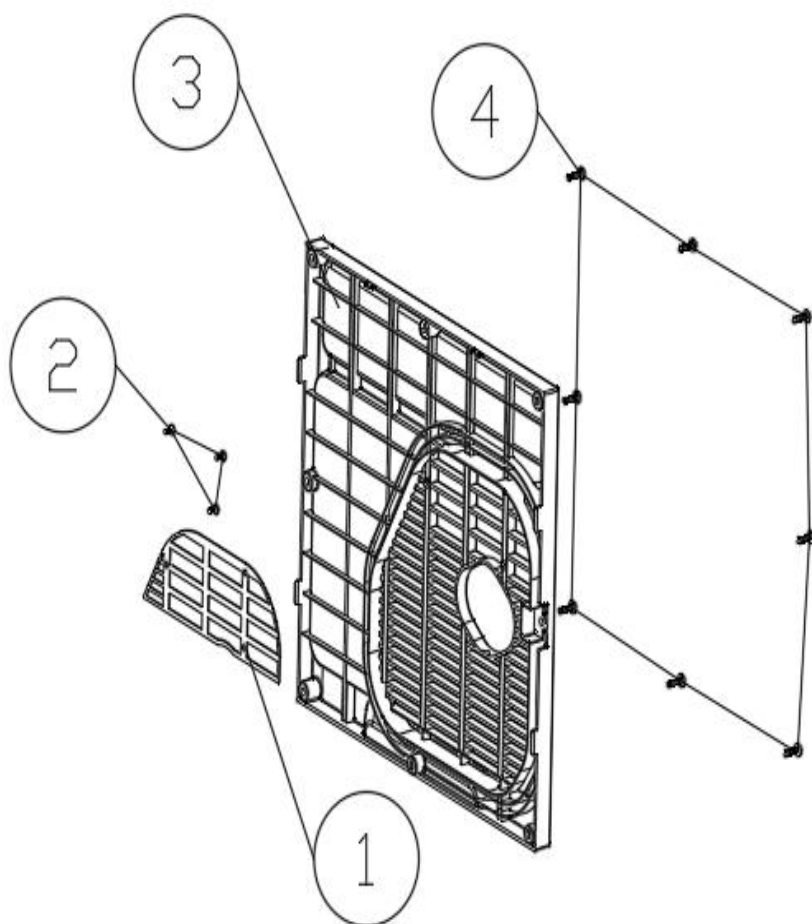


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Air outlet baffle	
2	Screw	
3	Exhaust cover assembly	SP11000IS-030
4	Screw	

FRAME

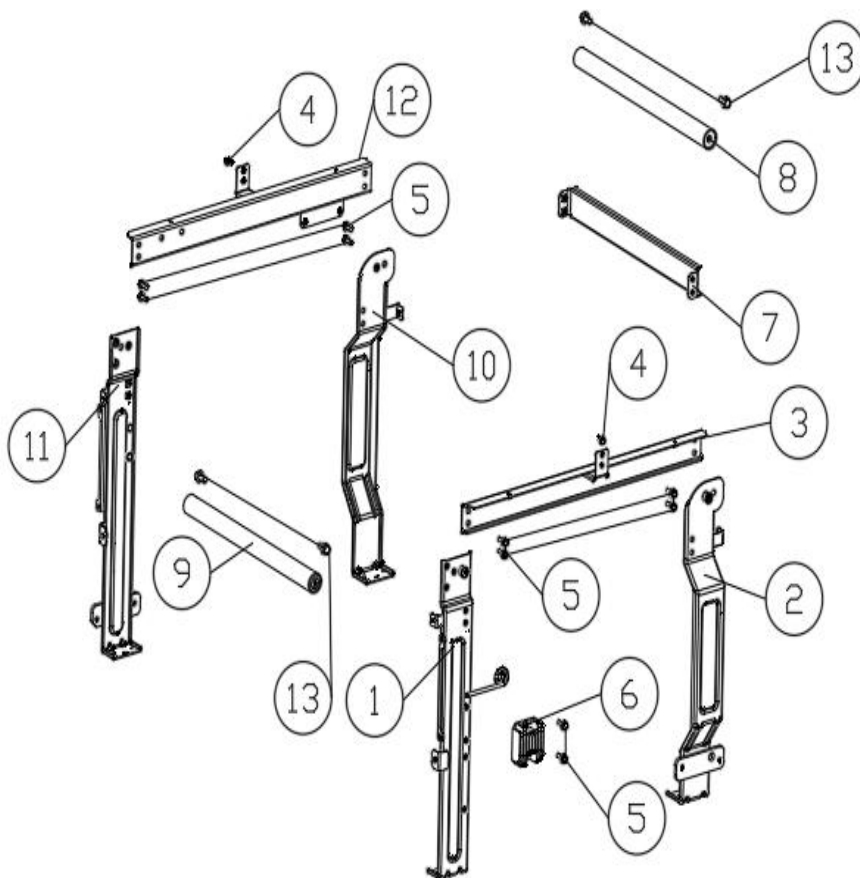


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Right support 1	
2	Right support 2	
3	Tank right beam	
4	Bolt	
5	Bolt	
6	DC voltage regulator	SP11000IS-031
7	Rear beam of fuel tank	
8	Rear armrest	
9	Front armrest	
10	Left bracket 2	
11	Left bracket 1	
12	Left beam of fuel tank	
13	Bolt	

FRONT COVER ASSEMBLY

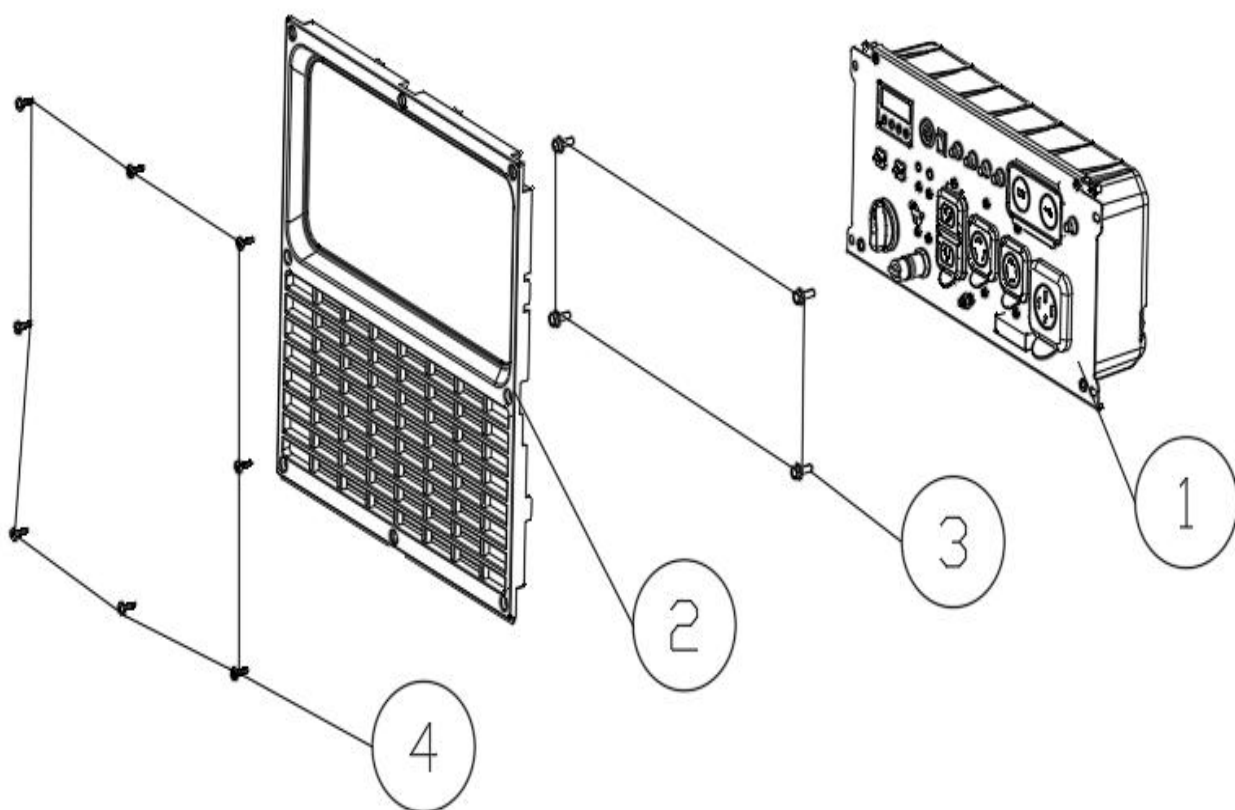


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Control panel assembly	SP11000IS-032
2	Panel base	
3	Bolt	
4	Screw	

INVERTER

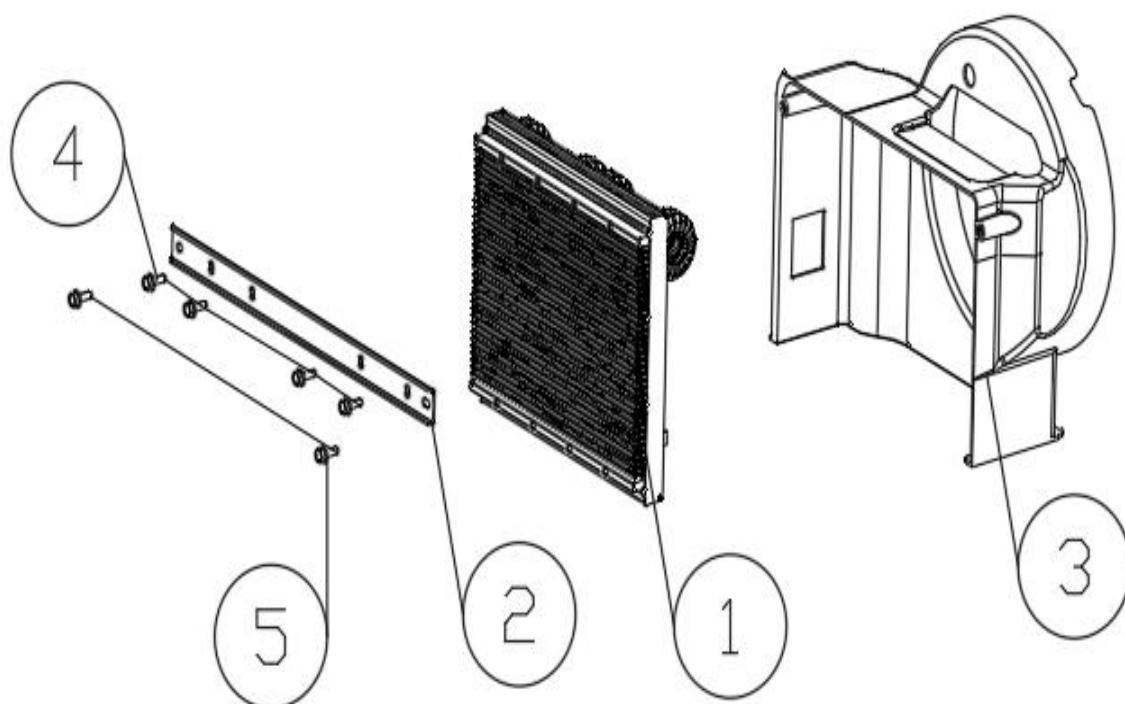


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Inverter	SP11000IS-033
2	Inverter installation bracket	
3	Intake wind hood	
4	Bolt	
5	Bolt	

BATTERY

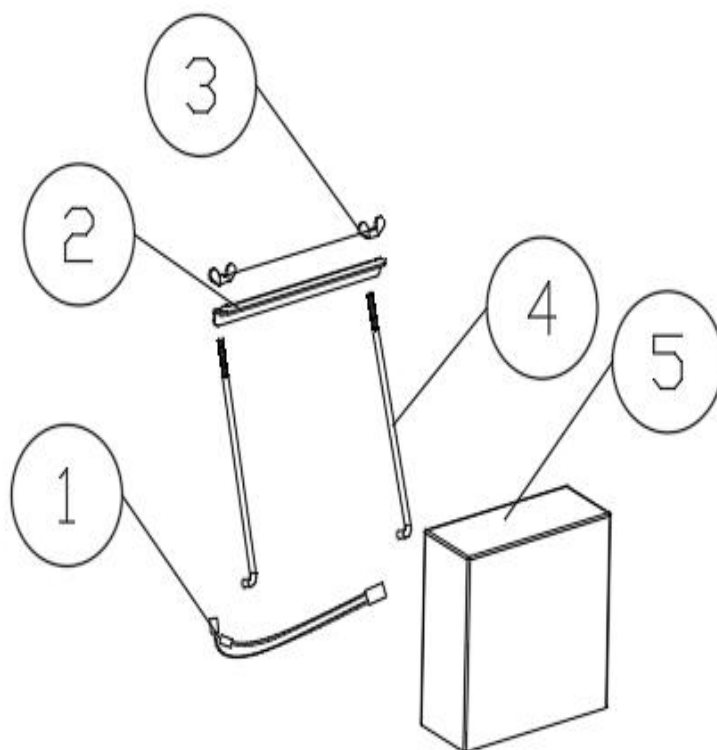


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Battery connection cable	SP11000IS-034
2	Battery holder	
3	Nylon nut	
4	Bolt	
5	Battery	SP11000IS-035

HANDLE

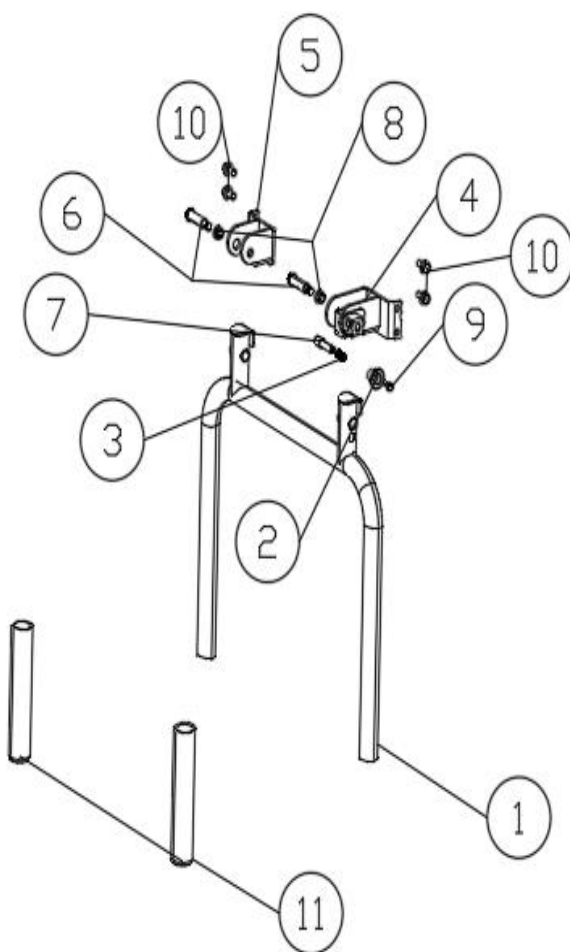

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Handle	SP11000IS-036
11	Handle rubber sleeve	
2	Handle Lock	SP11000IS-037
3	Fastening spring	
4	Right handrest	
5	Left handrest	
6	Handle pin	
7	Pin	
8	Nut	
9	Bolt	
10	Bolt	

WHEEL

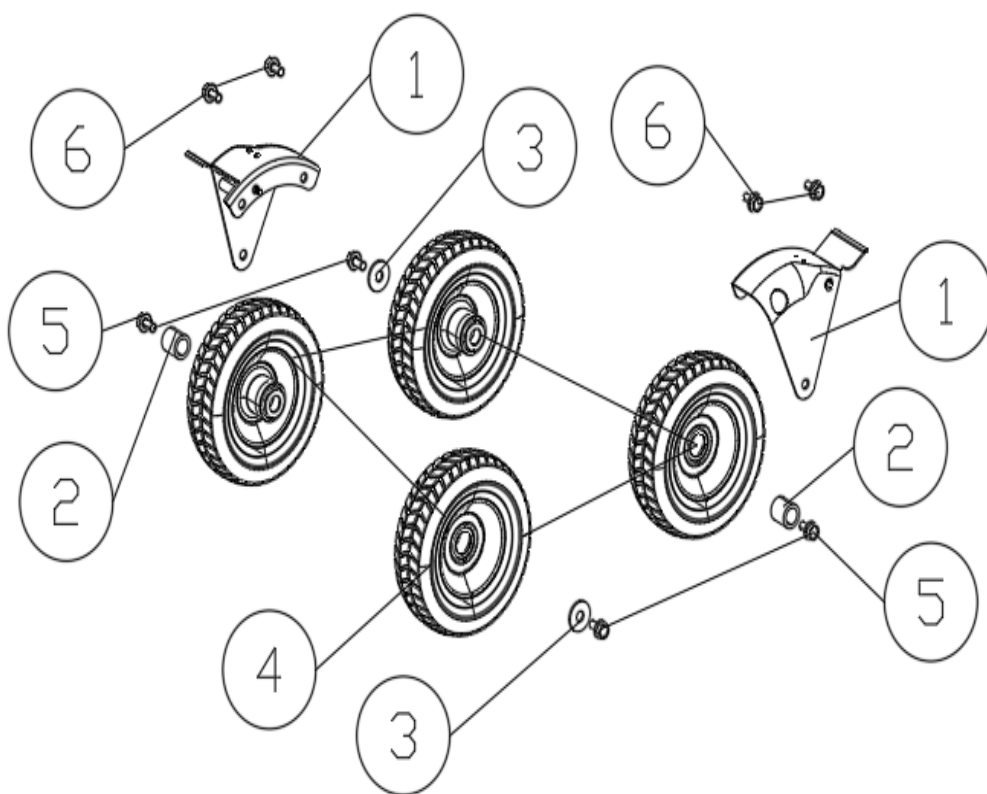

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Brake components	SP11000IS-038
2	Bushing	
3	Washer	
4	Wheel	SP11000IS-039
5	Bolt	
6	Bolt	



ADDITIONAL PARTS

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Ignition Module	SP11000IS-040
2	Push button start	SP11000IS-041
3	On off switch	SP11000IS-042
4	Circuit Breaker	SP11000IS-043
5	Digital display	SP11000IS-044
6	Fuel switch	SP11000IS-045
7	Fuel Switch Knob	SP11000IS-046

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au