




## SPARE PARTS CATALOGUE




**MX12500AS**

## MACHINE

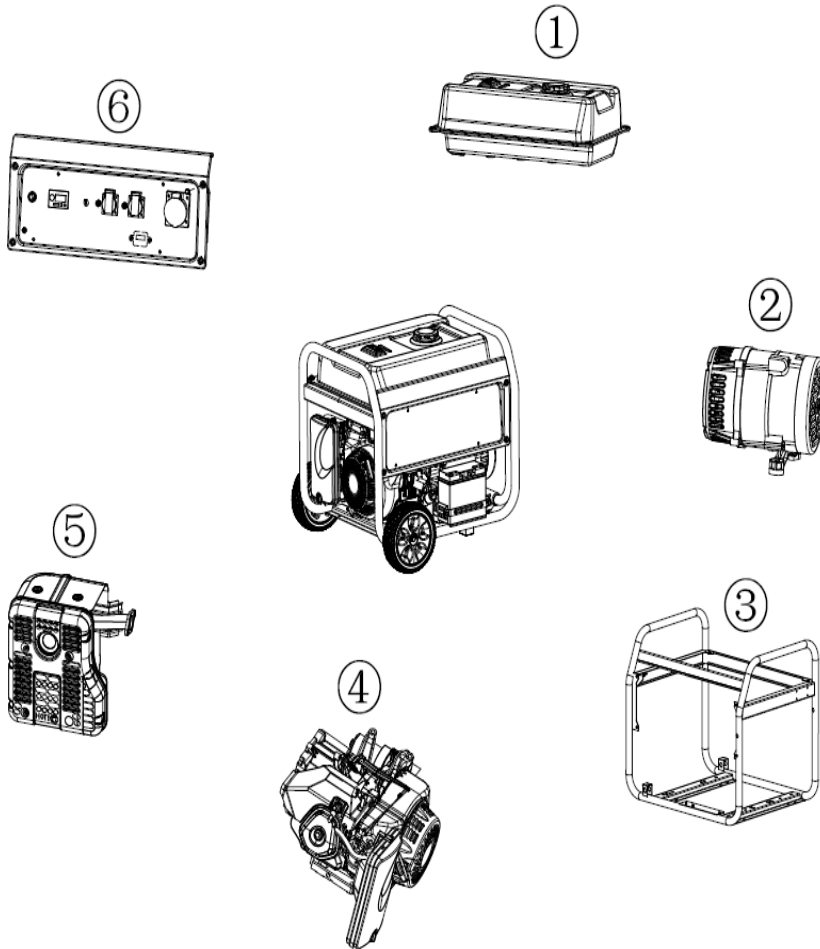


| NO. | DESCRIPTION            | MAXWATT PART NUMBER |
|-----|------------------------|---------------------|
| 1   | Fuel tank assembly     |                     |
| 2   | Alternator assembly    |                     |
| 3   | Frame assembly         |                     |
| 4   | Engine assembly        |                     |
| 5   | Muffler assembly       |                     |
| 6   | Control panel assembly |                     |

## FUEL TANK

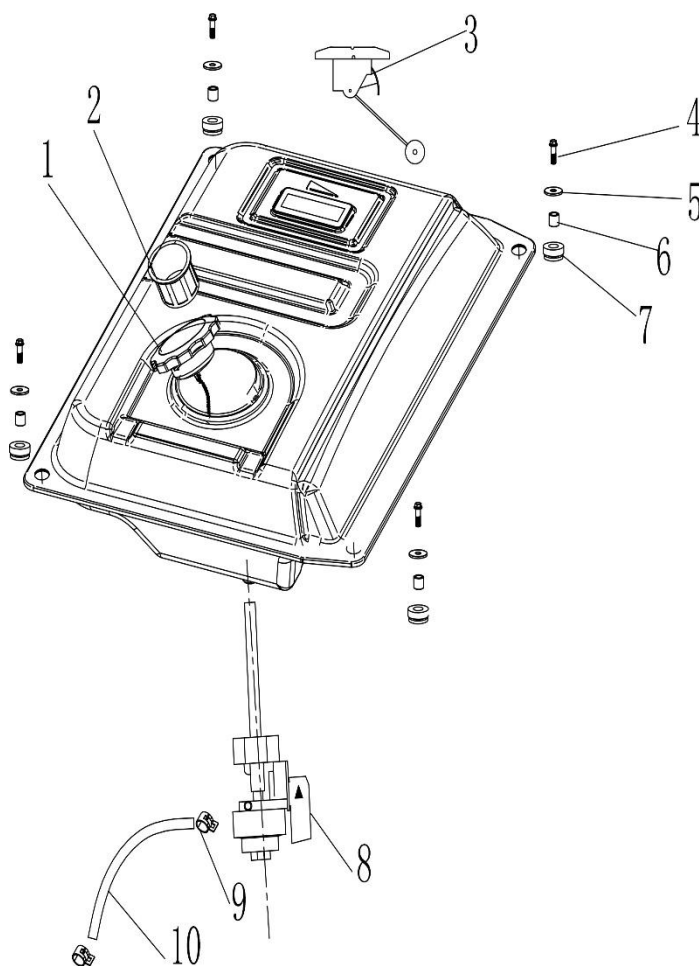


| NO. | DESCRIPTION          | MAXWATT PART NUMBER |
|-----|----------------------|---------------------|
| 1   | Fuel tank cover      | SP12500AS-001       |
| 2   | Fuel filter          |                     |
| 3   | Oil leveler          |                     |
| 4   | Flange bolt          |                     |
| 5   | Fuel tank washer     |                     |
| 6   | Bushing              |                     |
| 7   | Fuel tank rubber mat |                     |
| 8   | Fuel valve           |                     |
| 9   | Clamp                |                     |
| 10  | Fuel pipe            | SP12500AS-002       |

## ALTERNATOR

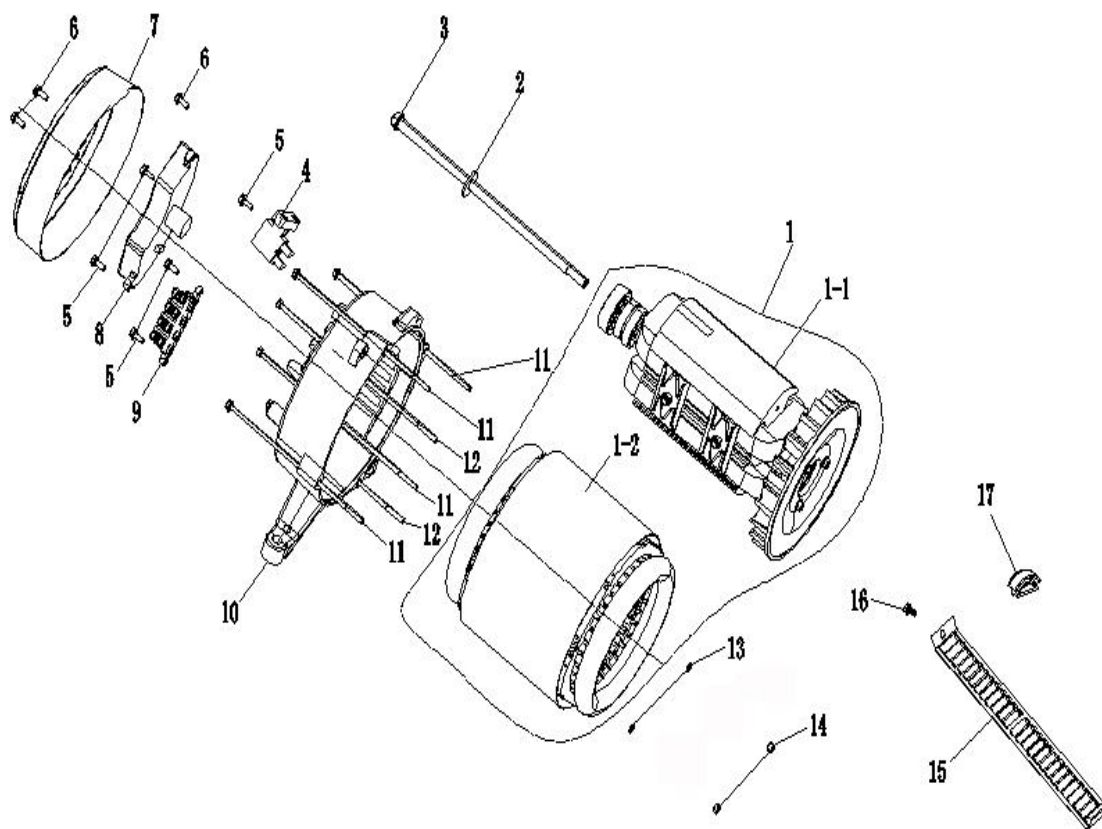


| NO. | DESCRIPTION          | MAXWATT PART NUMBER |
|-----|----------------------|---------------------|
| 1   | Alternator assembly  | SP12500AS-003       |
| 1-1 | Rotor                |                     |
| 1-2 | Stator               |                     |
| 2   | Plain washer         |                     |
| 3   | Flange bolt          |                     |
| 4   | Carbon brush         |                     |
| 5   | Flange bolt          |                     |
| 6   | Flange bolt          |                     |
| 7   | Alternator end cover |                     |
| 8   | Voltage regulator    |                     |
| 9   | Wiring board         |                     |
| 10  | Alternator bracket   |                     |
| 11  | Flange bolt          |                     |
| 12  | Flange bolt          |                     |
| 13  | Spring Washer        |                     |
| 14  | Lock nut             |                     |
| 15  | Motor end cover      |                     |
| 16  | Flange bolt          |                     |

## FRAME

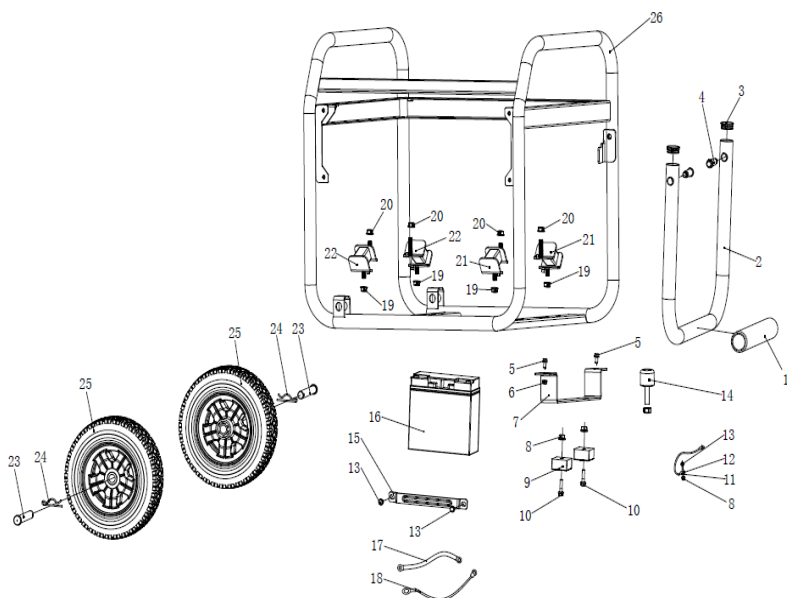


| NO. | DESCRIPTION               | MAXWATT PART NUMBER |
|-----|---------------------------|---------------------|
| 1   | Handlebar rubber cover    |                     |
| 2   | Handlebar components      |                     |
| 3   | Handlebar plastic plug    |                     |
| 4   | Handle fixing pin         |                     |
| 5   | Flange bolt               |                     |
| 6   | Flange nut                |                     |
| 7   | Support                   |                     |
| 8   | Flange nut                |                     |
| 9   | Frame Anti-vibration seat |                     |
| 10  | Flange bolt               |                     |
| 11  | Wave spring               |                     |
| 12  | Ground wire               |                     |
| 13  | Flange bolt               |                     |
| 14  | Vibration absorb          |                     |
| 14  | Clip, dowel pin           |                     |
| 15  | Battery board             | SP12500AS-004       |
| 16  | Battery board             |                     |
| 17  | Positive line             |                     |
| 18  | Negative line             |                     |
| 19  | Flange nut                |                     |
| 20  | Vibration absorb          |                     |
| 21  | Vibration absorb          |                     |
| 22  | Flange nut                |                     |
| 23  | Axle                      | SP12500AS-005       |
| 24  | Flat washer               |                     |
| 25  | Wheel assembly            |                     |

## CYLINDER HEAD

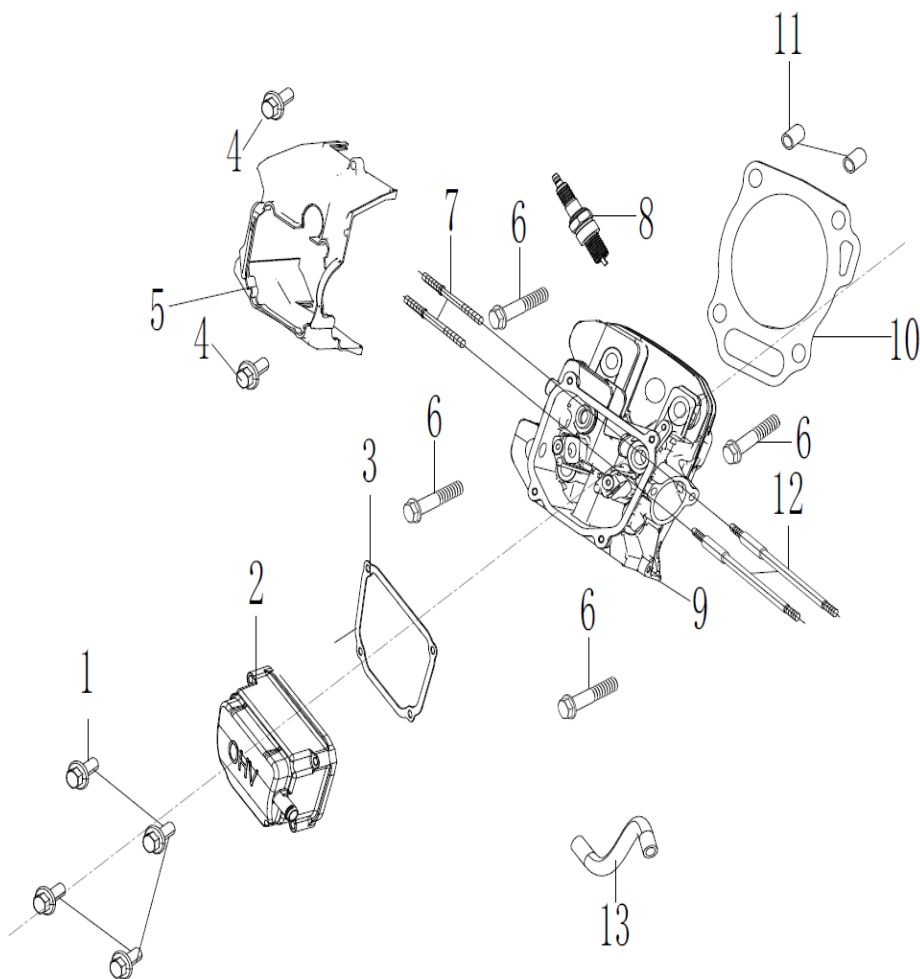


| NO. | DESCRIPTION         | MAXWATT PART NUMBER |
|-----|---------------------|---------------------|
| 1   | Bolt                |                     |
| 2   | Cover, comp, head   | SP12500AS-006       |
| 3   | Gasket, head cover  | SP12500AS-007       |
| 4   | Bolt                |                     |
| 5   | Air deflector       |                     |
| 6   | Bolt                |                     |
| 7   | Bolt, stud, exhaust |                     |
| 8   | Spark Plug          | SP12500AS-008       |
| 9   | Cylinder head comp  | SP12500AS-009       |
| 10  | Gasket, head cover  | SP12500AS-010       |
| 11  | Dowel pin           |                     |
| 12  | Bolt, stud, intake  |                     |
| 13  | Tube breather       | SP12500AS-011       |

## CRANKCASE ASSEMBLY

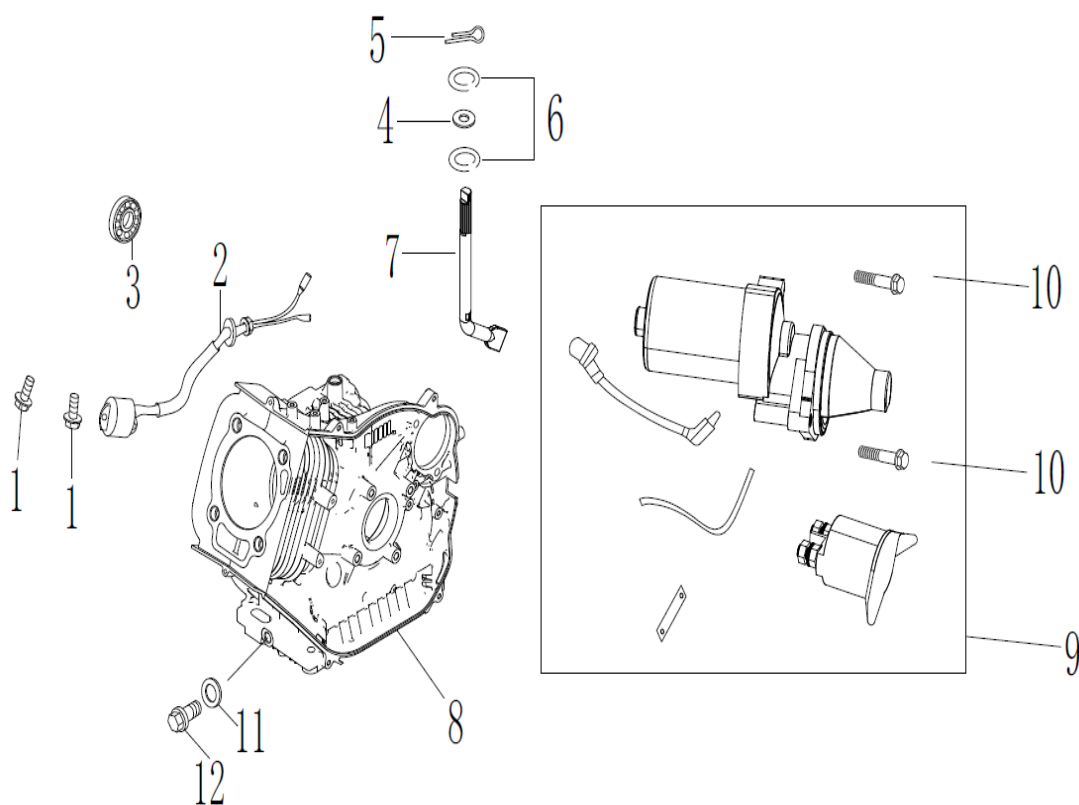


| NO. | DESCRIPTION       | MAXWATT PART NUMBER |
|-----|-------------------|---------------------|
| 1   | BOLT              |                     |
| 2   | ENGINE OIL SENSOR | SP12500AS-012       |
| 3   | BEARING           |                     |
| 4   | OIL SEAL          |                     |
| 5   | PIN, LOCK         |                     |
| 6   | WASHER            |                     |
| 7   | SHAFT, GOVERNOR   |                     |
| 8   | CRANKCASE         |                     |
| 9   | START MOTOR       | SP12500AS-013       |
| 10  | BOLT              |                     |
| 11  | WASHER            |                     |
| 12  | BOLT              |                     |

## CRANK CASE COVER

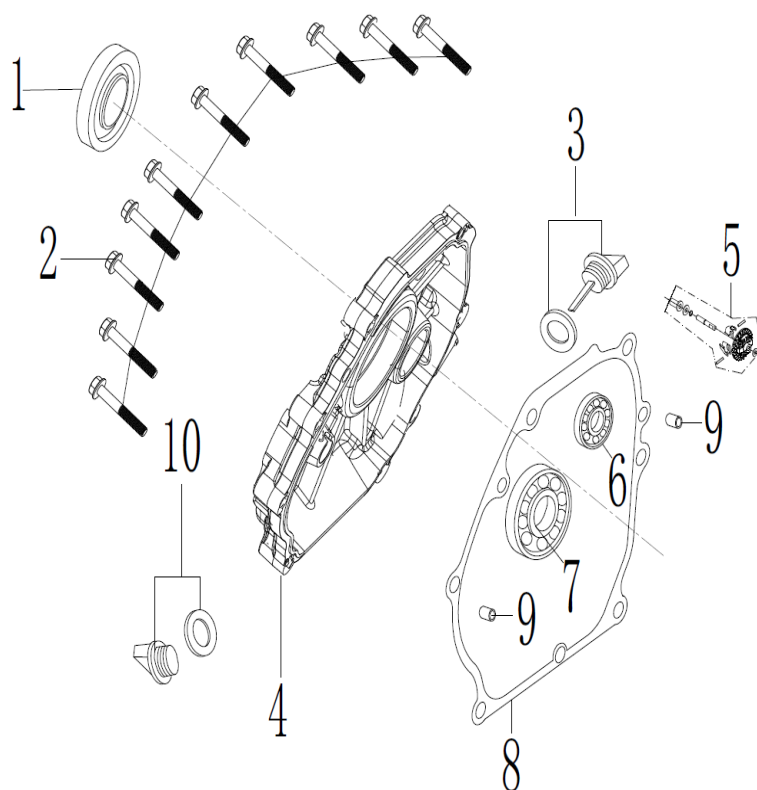


| NO. | DESCRIPTION             | MAXWATT PART NUMBER |
|-----|-------------------------|---------------------|
| 1   | OIL SEAL                |                     |
| 2   | BOLT                    |                     |
| 3   | DIPSTICK ASSY           |                     |
| 4   | CRANKCASE COVER         |                     |
| 5   | GOVERNOR GEAR KIT       |                     |
| 6   | BEARING                 |                     |
| 7   | BEARING                 |                     |
| 8   | GASKET, CRANKCASE COVER |                     |
| 9   | DOWEL PIN               |                     |
| 10  | PLUG AS-OIL             |                     |

## CRANKSHAFT PISTON

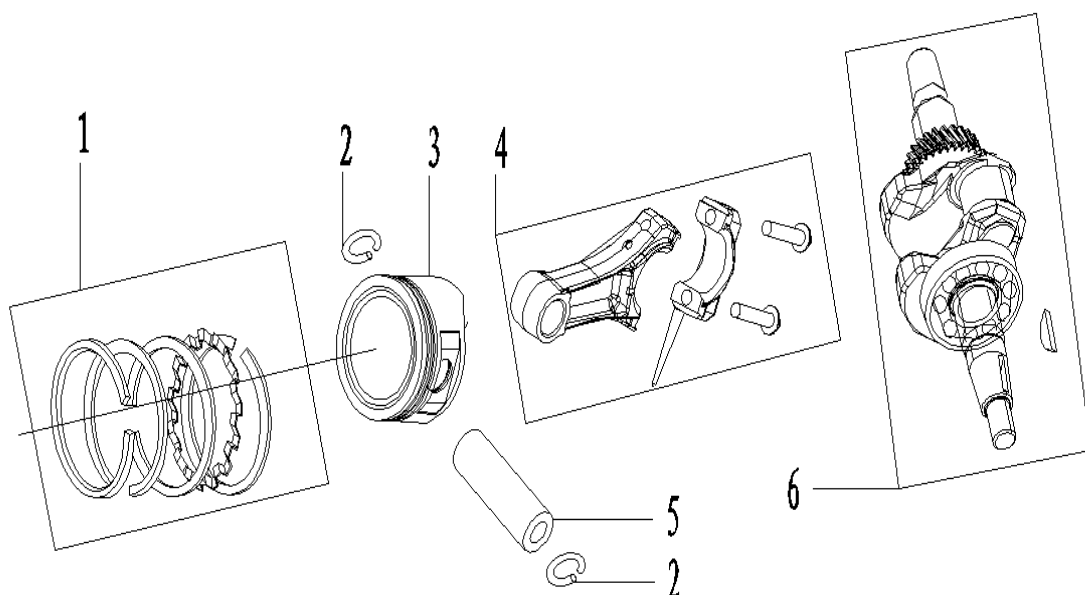


| NO. | DESCRIPTION         | MAXWATT PART NUMBER |
|-----|---------------------|---------------------|
| 1   | RING SET,PISTON     |                     |
| 2   | CLIP,PISTON PIN     |                     |
| 3   | PISTON              |                     |
| 4   | CONNECTING ROD ASSY |                     |
| 5   | PIN,PISTON          |                     |
| 6   | CRANKSHAFT ASSY     |                     |

## CAMSHAFT

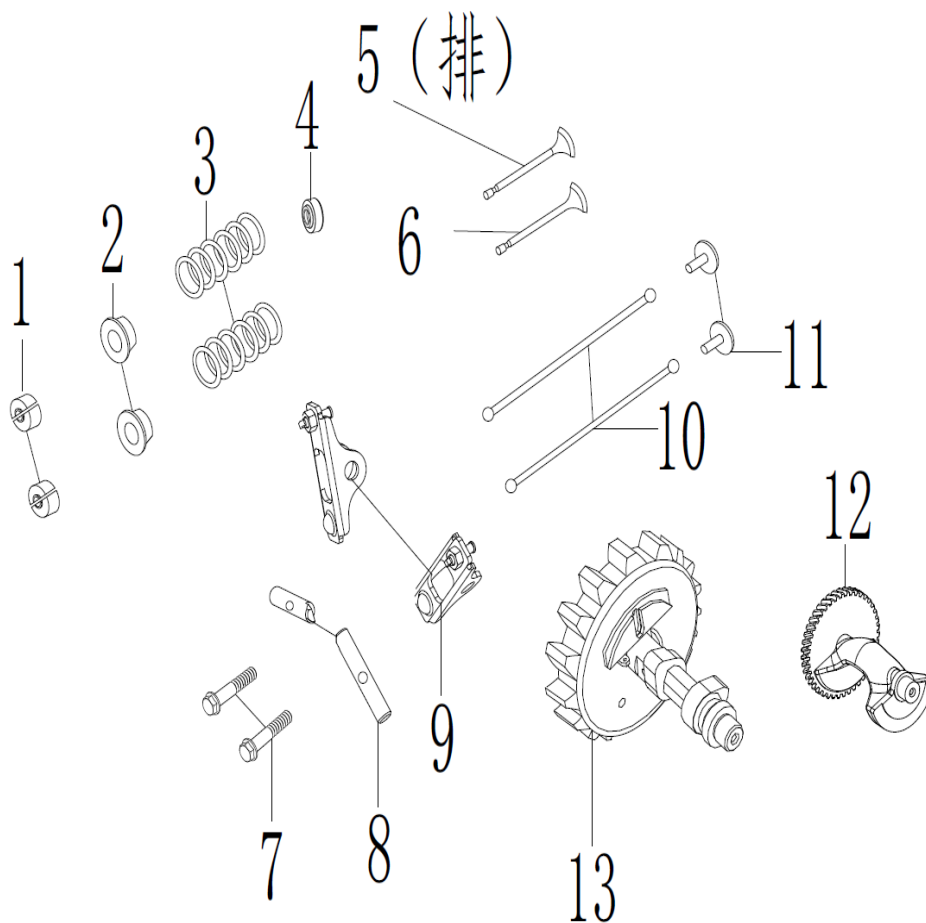


| NO. | DESCRIPTION            | MAXWATT PART NUMBER |
|-----|------------------------|---------------------|
| 1   | VALVE, LOCK, CLAMP     | SP12500AS-014       |
| 2   | RETAINER, VALVE SPRING |                     |
| 3   | SPRING, VALVE          |                     |
| 4   | OIL, SEAL              |                     |
| 5   | VALVE, EXHAUST         |                     |
| 6   | VALVE, INTAKE          |                     |
| 7   | BOLT                   |                     |
| 8   | ROCKER SHAFT           |                     |
| 9   | ROCKER ARM             |                     |
| 10  | PUSH ROD               |                     |
| 11  | LIFTER, VALVE          |                     |
| 12  | BALANCE SHAFT          |                     |
| 13  | CAMSHAFT, ASSY         |                     |

## CARBURETOR

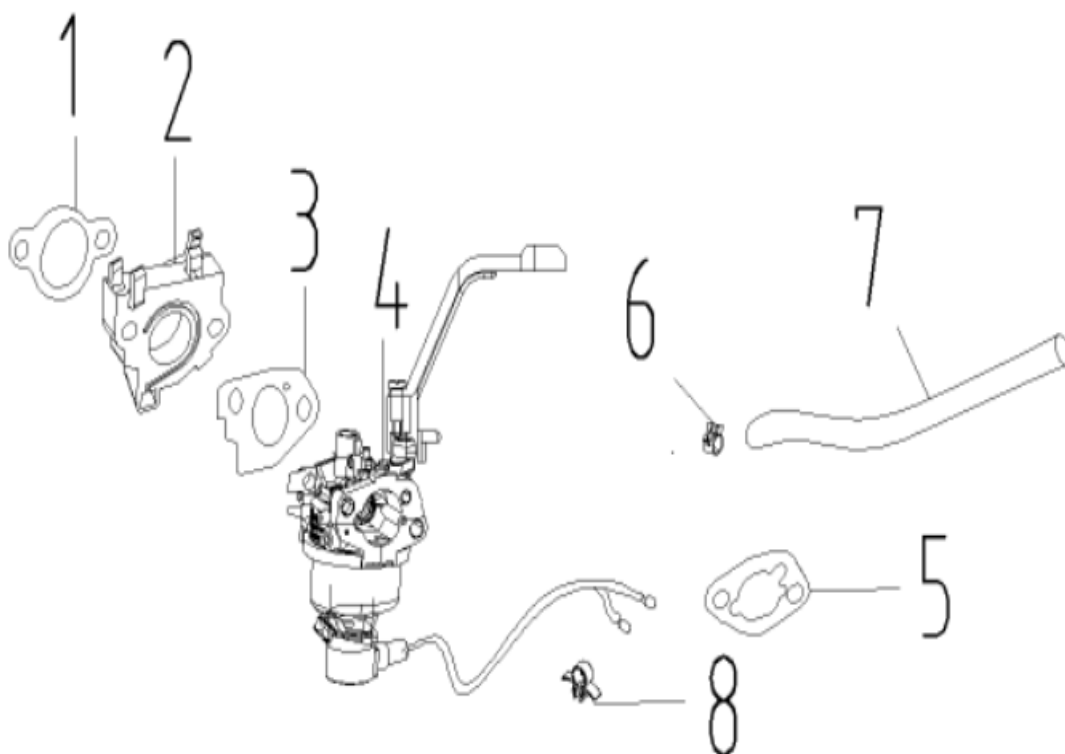


| NO. | DESCRIPTION          | MAXWATT PART NUMBER |
|-----|----------------------|---------------------|
| 1   | GASKET,INTAKE        | SP12500AS-015       |
| 2   | INSULATOR,CARBURETOR |                     |
| 3   | GASKET,CARBURETOR    |                     |
| 4   | CARBURETOR           |                     |
| 5   | GASKET,AIR CLEANER   |                     |
| 6   | CLIP,FUEL PIPE       | SP12500AS-016       |
| 7   | FUEL PIPE            |                     |
| 8   | WIRE CLIP            |                     |

## RECOIL STARTER

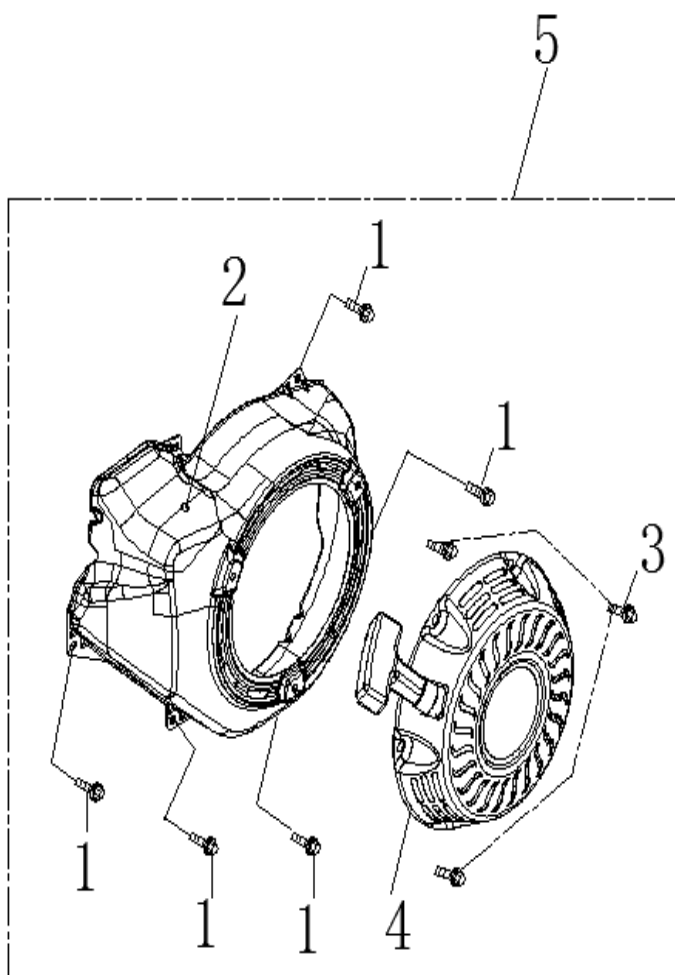


| NO. | DESCRIPTION           | MAXWATT PART NUMBER |
|-----|-----------------------|---------------------|
| 1   | BOLT,M6×12            |                     |
| 2   | WIND GUIDER,RECOIL    |                     |
| 3   | BOLT,FLANGE           |                     |
| 4   | RECOIL STARTER PULLER | SP12500AS-017       |
| 5   | RECOIL STARTER COMP   |                     |

## CONTROL

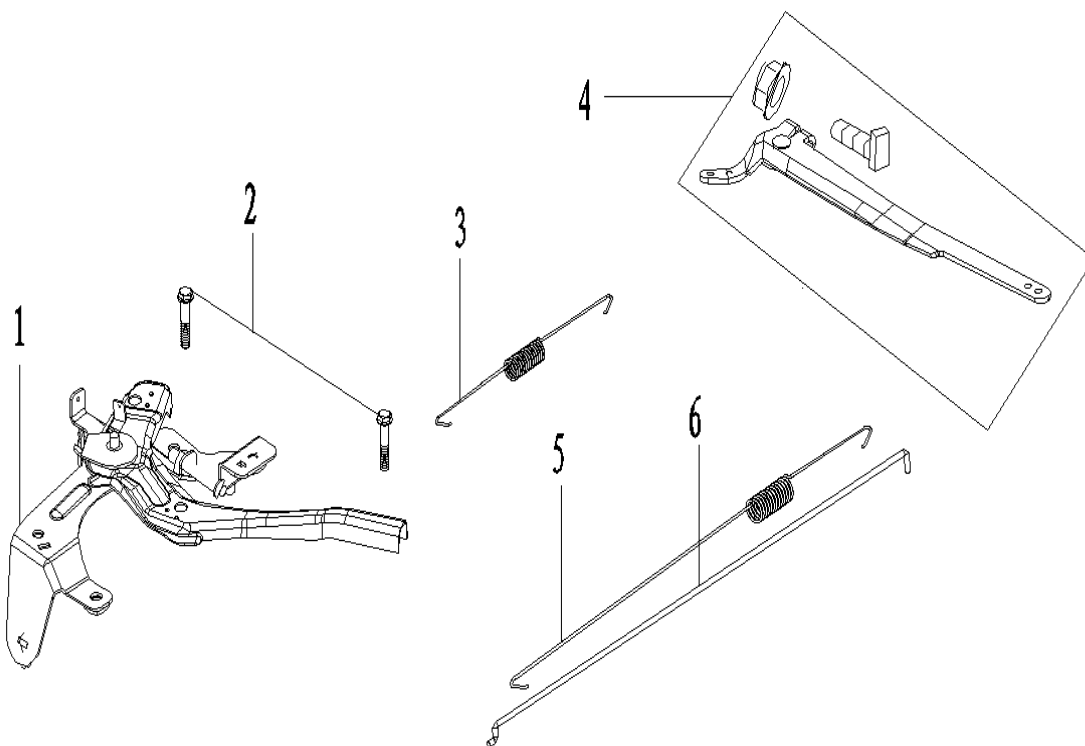


| NO. | DESCRIPTION            | MAXWATT PART NUMBER |
|-----|------------------------|---------------------|
| 1   | SPEED CONTROL,ASSY     |                     |
| 2   | BOLT                   |                     |
| 3   | SPRING,CABLE RETURN    |                     |
| 4   | HANDLE,SPEED CONTROL   |                     |
| 5   | SPRING,THROTTLE RETURN |                     |
| 6   | ROD,GOVERNOR           |                     |

## FLYWHEEL

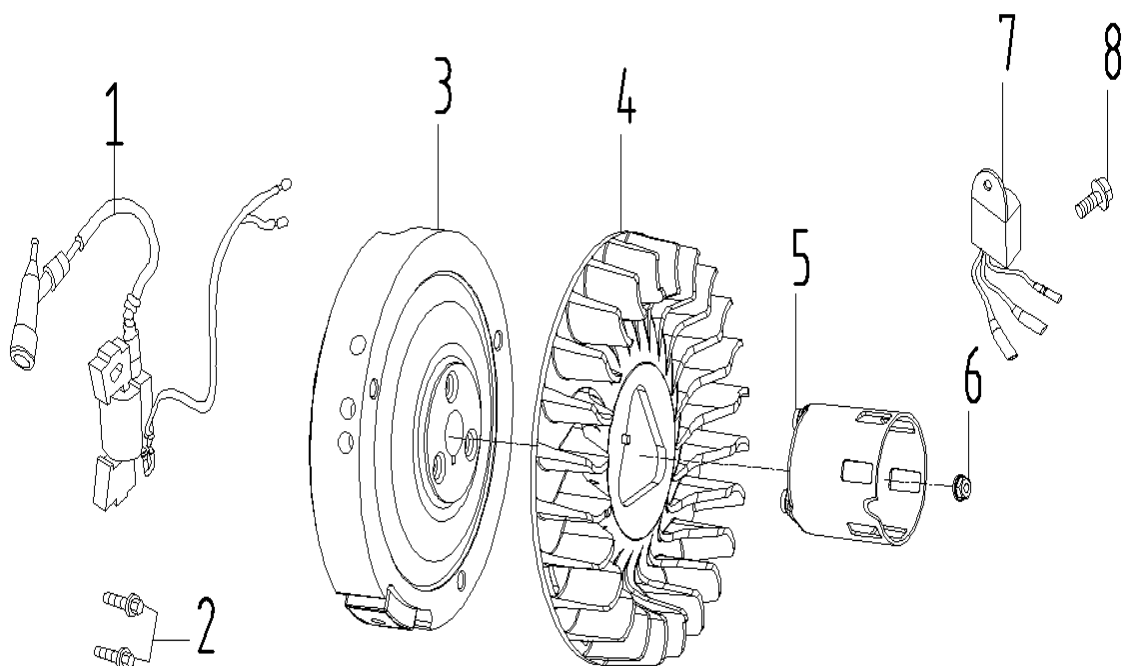


| NO. | DESCRIPTION        | MAXWATT PART NUMBER |
|-----|--------------------|---------------------|
| 1   | WIRE,ENGINE SWITCH | SP12500AS-018       |
| 2   | BOLT,FLANGE        |                     |
| 3   | FLYWHEEL COMP      |                     |
| 4   | FAN COOLING        |                     |
| 5   | PULLEY,STARTER     |                     |
| 6   | NUT SPECIAL        |                     |
| 7   | OIL ALARM          | SP12500AS-019       |
| 8   | BOLT,FLANGE        |                     |

AIR CLEANER

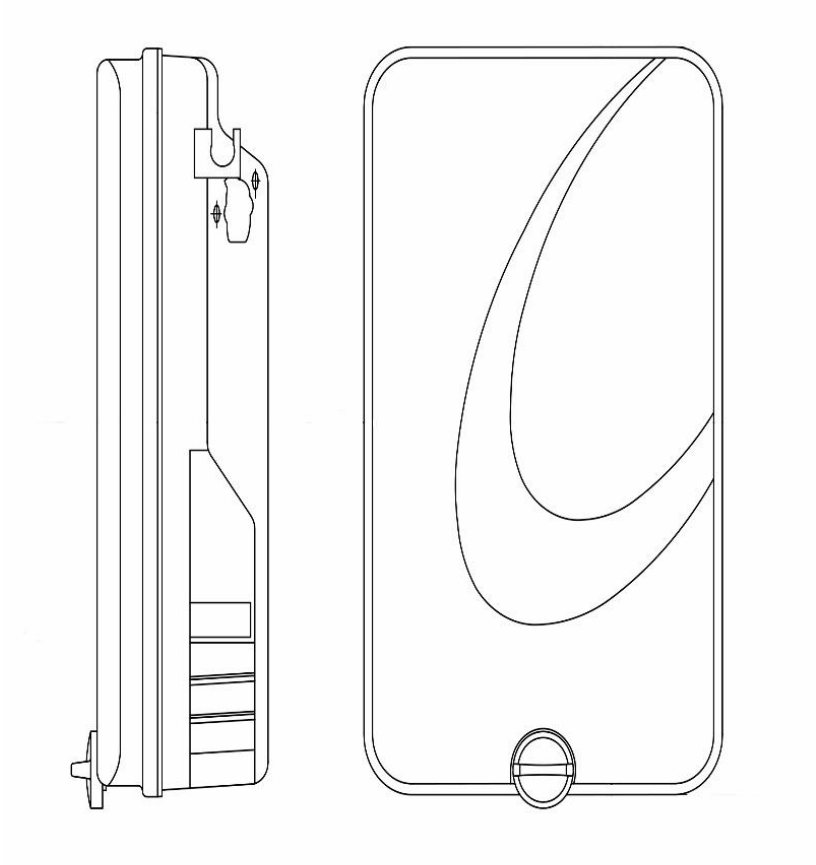


| NO. | DESCRIPTION      | MAXWATT PART NUMBER |
|-----|------------------|---------------------|
| 1   | AIR CLEANER ASSY | SP12500AS-020       |

## MUFFLER

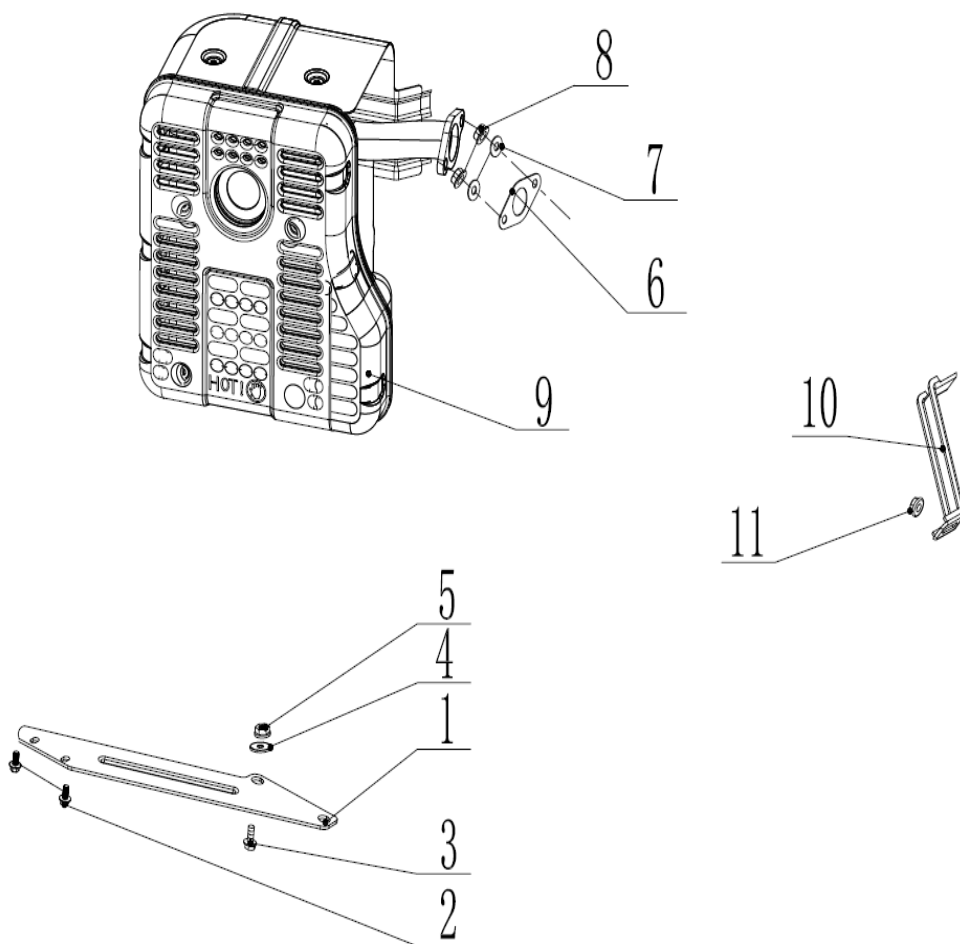

| NO. | DESCRIPTION         | MAXWATT PART NUMBER |
|-----|---------------------|---------------------|
| 1   | Support part        |                     |
| 2   | Flange bolt         |                     |
| 3   | Flange bolt         |                     |
| 4   | Washer              |                     |
| 5   | Flange nut          |                     |
| 6   | Muffler washer      | SP12500AS-021       |
| 7   | Spring washer       |                     |
| 8   | Hex nut             |                     |
| 9   | Muffler             |                     |
| 10  | Air cleaner support |                     |
| 11  | Flange nut          |                     |

## CONTROL PANEL

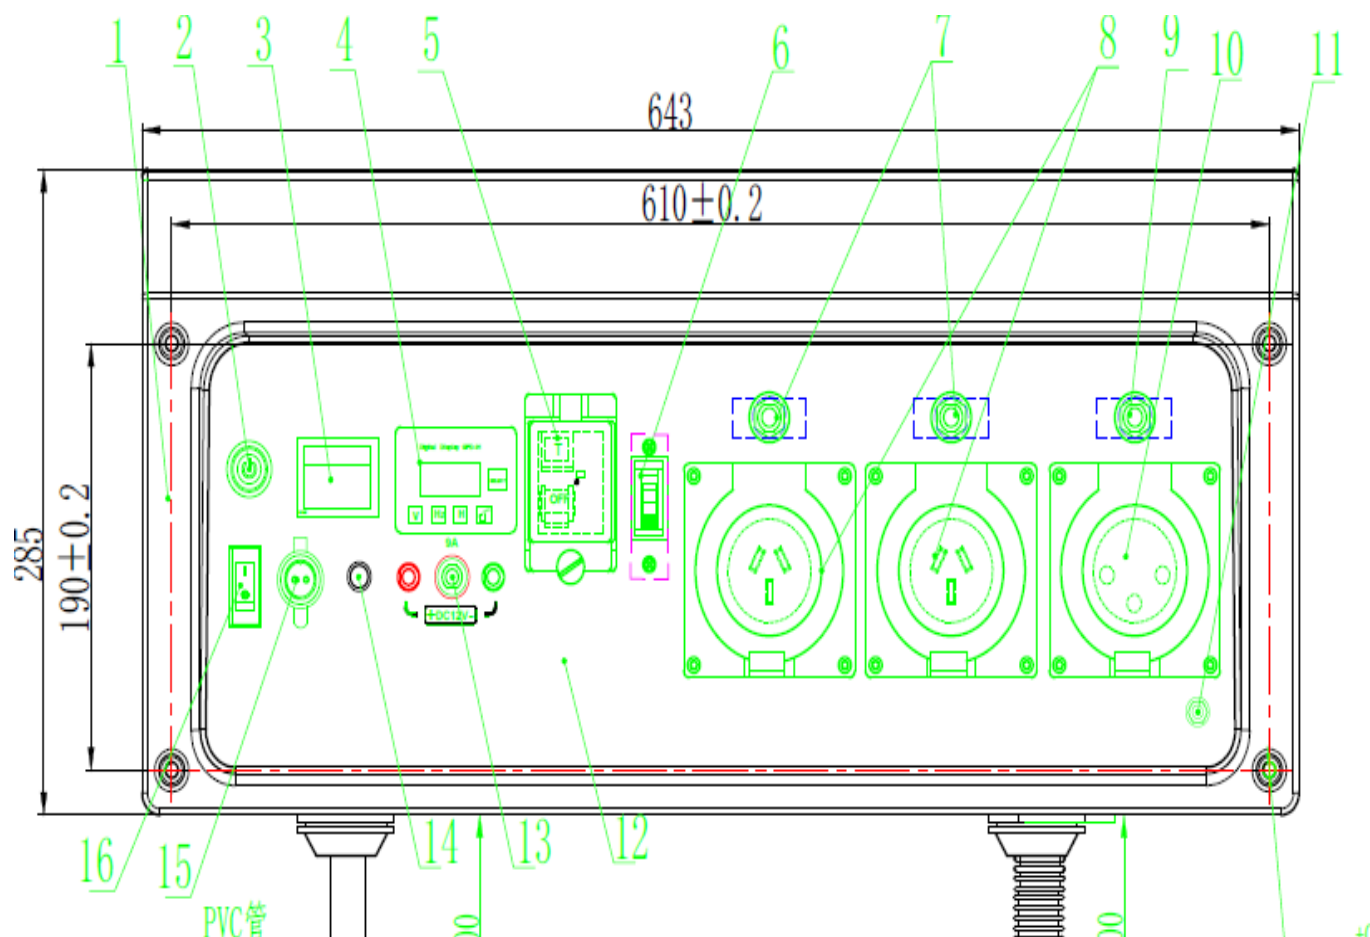

| NO. | DESCRIPTION            | MAXWATT PART NUMBER |
|-----|------------------------|---------------------|
| 1   | Control panel assembly | SP12500AS-022       |
| 2   | Switch                 | SP12500AS-023       |
| 3   | Switch                 | SP12500AS-024       |
| 4   | Four in one table      | SP12500AS-025       |
| 5   | Electric leakage       | SP12500AS-026       |
| 6   | Circuit breaker        | SP12500AS-027       |
| 7   | AC Circuit breaker     | SP12500AS-028       |
| 8   | Socket                 |                     |
| 9   | AC Circuit breaker     |                     |
| 10  | Socket                 |                     |
| 11  | Grounding terminal     |                     |
| 12  | Panel decal            |                     |
| 13  | DC Circuit breaker     |                     |
| 14  | Power indicator        |                     |
| 15  | Socket                 |                     |
| 16  | Switch                 |                     |

# SPARE PARTS AND SERVICING

## WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at [customercare@maxwatt.com.au](mailto:customercare@maxwatt.com.au) we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

## ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



---

Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

[customercare@maxwatt.com.au](mailto:customercare@maxwatt.com.au)